

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Казахстан +7(727)345-47-04

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Беларусь +(375)257-127-884

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Узбекистан +998(71)205-18-59


Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Киргизия +996(312)96-26-47

<https://rechner.nt-rt.ru> || ret@nt-rt.ru

КАТАЛОГ

емкостных систем измерения уровня наполнения KFS KFA KFX

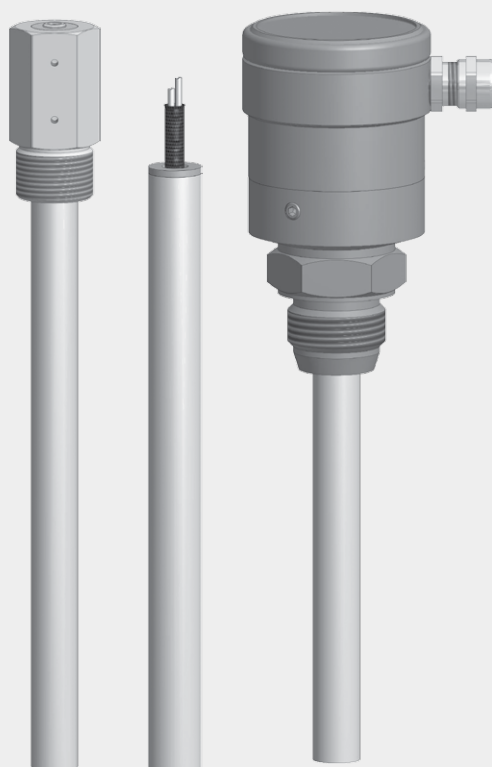

RECHNER
SENSORS



CAPACITIVE FILLING LEVEL MEASURING SYSTEM



Technology	4
Norms	5
Technical information	6 - 7
Type code	8 - 20
TrueLevel - Capacitive measurement system, analogue	21 - 26
TrueLevel - Probes	27 - 30
TrueLevel - Evaluation Unit	31 - 34
TrueLevel - Probes with ATEX-certification	35 - 38
PerLevel - Capacitive measurement system, binary	39 - 44
PerLevel - Default probes	45 - 52
PerLevel - Probes with special designs	53 - 60
PerLevel - Evaluation Unit	61 - 72
PerLevel - Probes with permanently linked evaluation Unit, KFK	73 - 78
PerLevel - Probes with process-connection-head, KFX	79 - 84
PerLevel - Probes with ATEX-certification	85 - 92
Accessories	93 - 105
Type selection	106 - 108

TECHNOLOGY

Capacitive level measurement has proven itself as one of the most universal level measurement principles. The reason for this is the possibility of the measurement of almost all products, no matter if liquids, bulk materials or pastes.

In these days, increasingly the floating switches, rotating switches and vibrating forks are replaced by more reliable capacitive sensors and capacitive level measuring systems. The electronic systems operate without mechanical activation thus they are not subject to contact bounce. There is no maintenance and the service life is independent of the switching frequency.

For capacitive level measuring systems we distinguish different measuring principles. The classic capacitive sensors are based on the 2 - electrode measuring principle. The measurement systems in this catalogue all operate according to RECHNER's patented three-electrode-principle.

The Three Electrode Measuring Principle

The core technology of our capacitive Triple-E Systems is based on innovative and patented capacitive circuit principles at which the capacity between the sensor electrode and a counter electrode „BE“ outside of the sensor is evaluated.

For a correct function and utilization of the capacity of the sensor system it is mandatory that the „BE“ evaluation electronic is connected to the container earth (PE) in close proximity of the measuring place.

This essential „BE“-connection is advantageous for the measurement and easy to establish because all metal parts of a process plant (e. g. container wall, or an additional copper foil) can be used as counter electrode.



Based on the evaluation principle we distinguish 3 variants:


FOR ANALOGUE MEASUREMENTS


FOR LIMIT VALUE MEASUREMENTS


FOR ANALOGUE AND
BINARY MEASUREMENTS

Process connections:

The application areas are manifold and wide spread and so are the possibilities of how our capacitive sensors can be designed mechanically so that they can be optimally integrated in to your process. We offer for instance:

- Thread M12, M18, M30, G1/4", G1/2" G1", as well as NPT thread
- Triclamp, Milk tube fittings,
- Stainless steel process adapter
- Squeeze clamps

NORMS

The products of Rechner Industrie-Elektronik GmbH are designed and checked in accordance with the latest standards and specifications, DIN - VDE - IEC, for electric and electronic instruments. For new and revised products the newest standards are always used.

CE - Marking

The CE marking represents the manufacturer's confirmation that the identified product conforms to applicable standards and directives throughout Europe. The following regulations apply to the RECHNER products.

2014/30/EU

EMC Directive (EN 60 947-5-2)

2014/35/EU

Low-voltage Directive (compare with VDE 0160, product standard EN 60947-5-2)

RECHNER Industrie-Elektronik GmbH certifies the conformity of its products with each of the applicable directives in a Manufacturer's Declaration.

TECHNICAL INFORMATION

Housing materials

The application of the housing materials used is based on the technical specifications of the material and of the manufacturer. Even though RECHNER Sensors have far-reaching application experience concerning the use of different housing materials, the customer is responsible for checking in each case that the housing material is suitable for the application.

The following housing materials are used:

The following housing materials are used:				
Short description	Material	FDA - No.	Contact with food permitted	Traceability according to EU 1935/2004
ABS	Acrylnitril-Butadien-Styrole	No	No	No
GFK	Glass fibre reinforced plastic	No	No	No
PEEK	Polyetheretherketonee	FDA 21 CFR 177.2415	Yes	Yes
PP	Polypropylene	FDA 21 CFR 177.1520	Yes	No
PTFE	Polytetrafluoroethylenee	FDA 21 CFR 177.1550	Yes	Yes
PVC	Polyvinylchloridee	No	No	No
PVDF	Polyvinylidene fluoridee	FDA 21 CFR 177.2510	Yes	No
AL	Aluminum	No	No	No
MS	Brass / chrome or nickel plated	No	No	No
VAa	Stainless steel VA, material No. 1.4301 (AISI 304)	No	No	No
VAb	Stainless steel VA, material No. 1.4305 (AISI 303)	No	No	No
VAc	Stainless steel VA, material No. 1.4404 (AISI 316L)	FDA konform	Yes	No

Cable

For the standard models COAX-, TRIAX-, PVC- or PUR-cable are used. One has to take into consideration that the cable should not be moved with ambient temperatures below -5°C . PVC is not suitable for use in applications with oil-based liquids or with UV-radiation. PUR is not suitable for continuous contact with water. For special application areas silicone or PTFE cables are available. COAX- and TRIAX-Cable are not designed for continuous movement/flexible use. When routing please consider the bending radius of minimum $10 \times \varnothing$.

TECHNICAL INFORMATION

Degree of protection according to IEC 60529

	1. Digit: Protection against solids		2. Digit: Protection against water	
IP	0	No protection	0	No protection against water
IP	1	Protection against solid foreign bodies $\varnothing > 50$ mm	1	Protection against vertical water drops
IP	2	Protection against solid foreign bodies $\varnothing > 12,5$ mm	2	Protection against diagonal water drops (up to a 15° angle)
IP	3	Protection against solid foreign bodies $\varnothing > 2,5$ mm	3	Protection against spray water
IP	4	Protection against solid foreign bodies $\varnothing > 1$ mm	4	Protection against splashing water
IP	5	Protection against harmful dust deposits, dust protected	5	Protection against water jet
IP	6	Protection against contact with voltage-carrying parts. Protection against penetration of dust	6	Protection against strong water jet
			7	Protection against ingress of water when the equipment is immersed in water, up to 1 m depths and for a period of 30 minutes
			8	Protection against ingress of water when the equipment is immersed in water, under conditions determined from the manufacturer.
			9	Protection against ingress of water during high pressure or steam cleaning under defined conditions

Temperature sensors

Optional additional temperature measuring sensors can be integrated in the probe (PT 100, variants of thermo elements on request).

TYPE CODE PROBE

Example: Capacitive level probe for analogue measurement

KFS - 1 - 85 - 1500 - 1200 - GFK/VA - D16 - TB80 - G1 - E - X02 - Y75

Example: Capacitive level probe for limit value measurement

KFS - 54 - 15 - 1500 - 15/500/1000/1200 - GFK/VA - D16 - TB80 - G1 - E - X02 - Y75

1	2	3	4	5	6	7	8	9	10	11	12	13
												ATEX, if existing
												Connection to the Evaluation Unit
												Length of the probe cable
												E = Special version, if existing
												Process connection, if existing
												TB = Temperature barrier, if existing
												Diameter of the probe
												Housing material
												Length of the analogue measuring area „M“ (in mm)
												Position of the switching points 15/X2/X3/X4 (in mm)
												Probe length (in mm)
												KFS-1 = Length of the reference area
												KFS-5... Electrode length
												1 = Analogue Measurement
												51, 52, 53, 54 = Limit Value Measurement and Number of Switching Points
												KFS = Capacitive Filling Level Probe

Position 2

Value	Measuring principle
1	Analogue
51	1 Switching Point
52	2 Switching Points
53	3 Switching Points
54	4 Switching Points
55	5 Switching Points

Position 3

	Analogue	Application recommendation
KFS-1	40	For materials with very high dielectric constant (DC) and/or small body sizes
	50	For materials with high DC
	60	For materials with high DC
	85	Version for universal use, for materials with low DC and/or low density
	Electrode length	
KFS-5	5	For adhesive products, like glue or pastes
	15	Version for universal use
	30	For materials with low DC or materials with low density

TYPE CODE PROBE

Position 4

Value	Probe length
Material	Max. length
GFK	2000 mm
PTFE	2000 mm
PEEK	400 mm
PVDF	2000 mm
PVC	2000 mm

Position 5

Length of the measuring area or position of the switching points (depends on the model).

Position 6 housing material

Material	Probe	Housing / Process connection
GFK	Fiberglass reinforced plastic	Fiberglass reinforced plastic
GFK/VAa	Fiberglass reinforced plastic	Stainless steel No. 1.4301 (AISI 304)
GFK/VAb	Fiberglass reinforced plastic	Stainless steel No. 1.4305 (AISI 303)
GFK/VAc	Fiberglass reinforced plastic	Stainless steel No. 1.4404 (AISI 316L)
GFK/AL	Fiberglass reinforced plastic	Aluminum
PE	Polyethylene	Polyethylene
PEEK	Polyetheretherketone FDA 21 CFR 177.2415	Polyetheretherketone
PEEK/Ms	Polyetheretherketone FDA 21 CFR 177.2415	Brass nickel
PEEK/VAa	Polyetheretherketone FDA 21 CFR 177.2415	Stainless steel No. 1.4301 (AISI 304)
PEEK/VAb	Polyetheretherketone FDA 21 CFR 177.2415	Stainless steel No. 1.4305 (AISI 303)
PEEK/VAc	Polyetheretherketone FDA 21 CFR 177.2415	Stainless steel No. 1.4404 (AISI 316L)
POM	Polyoxymethylene	Polyoxymethylene
PTFE	Polytetrafluoroethylene FDA 21 CFR 177.1550	Polytetrafluoroethylene
PTFE/AL	Polytetrafluoroethylene FDA 21 CFR 177.1550	Aluminum
PTFE/VAa	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4301 (AISI 304)
PTFE/VAb	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4305 (AISI 303)
PTFE/VAc	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4404 (AISI 316L)
PTFE/MS	Polytetrafluoroethylene FDA 21 CFR 177.1550	Brass nickel
PVC	Polyvinylchloride	Polyvinylchloride
PVDF	Polyvinylidene fluoride	Polyvinylidene fluoride
PVDF/AL	Polyvinylidene fluoride	Aluminum
PVDF/VAb	Polyvinylidene fluoride	Stainless steel No. 1.4305 (AISI 303)
PFA	Perfluoralkoxy-Polymere	Perfluoralkoxy-Polymere
PP	Polypropylene	Polypropylene

TYPE CODE PROBE

Position 7

Value	Diameter of the probe
D08	8 mm
D10	10 mm
D12	12 mm
D13	13 mm
D16	16 mm
D20	20 mm

Position 8

Value	Temperature barrier
No indication	Without temperature barrier
TB50	50 mm
TB80	80 mm
TB100	100 mm

Position 9

Value	Process connection
No indication	No process connection
G1	G 1"
PHG1	G 1" Connection head
G11/2	G 1 1/2"
G1/4	G 1/4"
G3/4	G 3/4"
M12	M 12 x 1
M14	M 14 x 1
M18	M 18 x 1
M20	M 20 x 1.5
M22	M 22 x 1.5
M30	M 30 x 1.5
NPT1	NPT 1"
W	Angle
WN	Angle
HN	Holder

Position 10

Value	Special version
No indication	Standard version
E	Special version

Position 11

Value	Length of the cable
X0E	Special version
X00	Without cable
X01	1 m
X02	2 m
X03	3 m
X05	5 m
X10	10 m

Position 12

Value	Connection to the evaluation unit
Y50	Y55
Y55	Y50
Y70	Y70
Y75	Y70
Y76	Y70
Y95	Y90
Y55K	Y50K

Position 13

Value	ATEX
StEx	For ATEX zone 20 (Dust), for ATEX zone 1 (Gas)
3D	With manufacturer declaration for ATEX zone 22 (Dust)

TYPE CODE EVALUATION UNIT

Example: Capacitive evaluation unit for analogue measurement

KFA - 1 - 1000 - XXL - IL - 4 - KL - Y70

Example: Capacitive evaluation unit for limit value measurement

KFA - 5 - 4 - XXL - P - A - FB - KL - Y50

1	2	3	4	5	6	7	8	9	10	11	12
											Connection to probe
											Electrical connection
											E = Special version, if existing
											HC = High conductivity, if existing
											TD = Time delay, if existing
											FB = Probe break control, if existing
											Output signal
											Output function
											Housing version
											For measuring area or Number of the evaluated switching points
											1 = Analogue measurement
											5 = Limit value measurement
KFA = Capacitive Filling Level Evaluation Unit											

Position 3

Value	Measuring area or Number of evaluated switching points
200	Measuring area $\geq 100 \dots 200$ mm
500	Measuring area $\geq 201 \dots 500$ mm
1000	Measuring area $\geq 501 \dots 1000$ mm
2000	Measuring area $\geq 1001 \dots 2000$ mm
1	1 Switching point
2	2 Switching points
3	3 Switching points
4	4 Switching points

Position 4

Value	Housing version in mm
B	46,6 x 74,5 x 30
L	55 x 96 x 25
XL	80 x 120 x 55
XXL	120 x 120 x 60

TYPE CODE EVALUATION UNIT

Position 5

Value	Output function
UL	Analogue voltage output
IL	Analogue current output
FL	Analogue frequency, TTL-Pegel
P	PNP transistor output
N	NPN transistor output
I	Relay output, 1 potential-free changeover contact
II	Relay output, 2 potential-free changeover contacts

Position 6

Value	Output Signal
0	0...10 V
10	10...0 V
4	4...20 mA
20	20...4 mA
TTL	Analogue frequency output, TTL-Level
S	Normally open (NO)
Ö	Normally closed (NC)
A	Antivalent (NO + NC)
1CO	1 Change-over contact
2CO	2 Change-over contacts

Position 7

Value	Wire break control
No indication	No wire break control
FB	Wire break control
1FB	Wire break control for 1 canal
2FB	Wire break control for 2 canals
3FB	Wire break control for 3 canals
4FB	Wire break control for 4 canals

Position 8

Value	Time delay (switch-on delay / switch-off delay)
No indication	No time delay
TD	Time delay
1TD	Time delay for 1 canal
2TD	Time delay for 2 canals
3TD	Time delay for 3 canals
4TD	Time delay for 4 canals

Position 9

Value	More properties
HC	Products with a high dielectric constant or conductivity

Position 10

Value	Special version
No indication	Standard version
E	Special version

Position 11

Value	Electrical connection
No indication	Connection cable
Z0E	Special cable length
Z01	1 m connection cable
Z02	2 m connection cable
Z05	5 m connection cable
KL	Screw terminals

Position 12

Value	Probe connection
Y50	Y55
Y50	Y55K
Y50K	Y55
Y50K	Y55K
Y55	Y50
Y70	Y75
Y70	Y76
Y90	Y95

TYPE CODE KFK-SYSTEMS

Example: Capacitive level probe for limit value measurement with fix connected evaluation unit

KFK - 51 - 15 - 300 - 15 - GFK - D16 - X0E - L - P - A - Z02

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
															ATEX, if existing
															Electrical connection
														E = Special version	
													TD = Time delay, if existing		
													Output signal		
													Output function		
													Housing design evaluation unit		
													Length probe cable		
													Process connection, if existing		
													Probe diameter		
													Housing material of the probe		
													Position of the switching points (in mm)		
													Probe length (in mm)		
													Electrode length		
													51, 52 = Limit value measurement with number of available switching points		
													KFK = Capacitive filling level probe with fix connected evaluation unit		

Position 2

Value	Measuring principle
51	1 Switching point
52	2 Switching points

Position 3

	Electrode length	Application recommendation
KFS-5	5	For very adhesive products, like glue or pastes
	15	Version for universal use
	30	For materials with low dielectric constant (DC), bulk materials with low density

Position 4

Value	Probe length
Material	Max. length
GFK	2000 mm
PTFE	2000 mm
PEEK	400 mm
PVDF	2000 mm
PVC	2000 mm

Position 5

Length of the measuring area or position of the switching points (depends on the model).

TYPE CODE KFK-SYSTEMS

Position 6 Housing material

Material	Probe	Housing / process connection
No indication	Fiberglass reinforced plastic (GFK)	Fiberglass reinforced plastic (GFK)
GFK	Fiberglass reinforced plastic	Fiberglass reinforced plastic
GFK/VAa	Fiberglass reinforced plastic	Stainless steel No. 1.4301 (AISI 304)
GFK/VAb	Fiberglass reinforced plastic	Stainless steel No. 1.4305 (AISI 303)
GFK/VAc	Fiberglass reinforced plastic	Stainless steel No. 1.4404 (AISI 316L)
GFK/AL	Fiberglass reinforced plastic	Aluminum
PE	Polyethylene	Polyethylene
PEEK	Polyetheretherketone FDA 21 CFR 177.2415	Polyetheretherketone
PEEK/Ms	Polyetheretherketone FDA 21 CFR 177.2415	Brass chrome or nickel
PEEK/VAa	Polyetheretherketone FDA 21 CFR 177.2415	Stainless steel No. 1.4301 (AISI 304)
PEEK/VAb	Polyetheretherketone FDA 21 CFR 177.2415	Stainless steel No. 1.4305 (AISI 303)
PEEK/VAc	Polyetheretherketone FDA 21 CFR 177.2415	Stainless steel No. 1.4404 (AISI 316L)
POM	Polyoxymethylene	Polyoxymethylene
PTFE	Polytetrafluoroethylene FDA 21 CFR 177.1550	Polytetrafluoroethylene
PTFE/AL	Polytetrafluoroethylene FDA 21 CFR 177.1550	Aluminum
PTFE/VAa	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4301 (AISI 304)
PTFE/VAb	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4305 (AISI 303)
PTFE/VAc	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4404 (AISI 316L)
PTFE/MS	Polytetrafluoroethylene FDA 21 CFR 177.1550	Brass chrome or nickel
PVC	Polyvinylchloride	Polyvinylchloride
PVDF	Polyvinylidene fluoride	Polyvinylidene fluoride
PVDF/AL	Polyvinylidene fluoride	Aluminum

Position 7

Value	Probe diameter
D08	8 mm
D10	10 mm
D12	12 mm
D13	13 mm
D16	16 mm

Position 8

Value	Process connection
No indication	No Process connection
D18	D = 18 mm
G1	G 1"
M12	M 12 x 1
M14	M 14 x 1
M18	M 18 x 1
M20	M 20 x 1,5
M30	M 30 x 1,5
NPT1	NPT 1"
W	Angle
FL	Flange

Position 9

Value	Length of the probe cable
X0E	Special length
X01	1 m
X02	2 m
X03	3 m
X05	5 m
X10	10 m

Position 10

Value	Housing version in mm
B	46,6 x 74,5 x 30
L	55 x 96 x 25

TYPE CODE KFK-SYSTEMS

Position 11

Value	Output function
P	PNP Transistor output
N	NPN Transistor output

Position 12

Value	Output signal
S	Normally open (NO)
Ö	Normally closed (NC)
A	Antivalent (NO + NC)
SÖ	1 canal normally open (NO) + 1 canal normally closed (NC)

Position 13

Value	Time delay (switch-on delay / switch-off delay)
No indication	No time delay
TD	Time delay

Position 14

Value	Special version
No indication	Standard version
E	Special version

Position 15

Value	Electrical connection
Z0E	Special cable length
Z01	1 m connection cable
Z02	2 m connection cable
Z05	5 m connection cable

Position 16

Value	ATEX
3D	With manufacturer declaration for ATEX zone 22 (Dust)

TYPE CODE KFX-5...

Example: Capacitive filling level probe with integrated evaluation unit in the connection head

KFX - 52 - 15 - 1000 -15//700-GFK/VAa-D16 - PHG1 - P - S - KL

1	2	3	4	5	6	7	8	9	10	11	12	13
												ATEX, if existing
												Electrical connection
												E = Special version, if existing
												Output signal
												Output function
												Process connection
												Probe diameter
												Housing material
												Position of the switching points (in mm)
												Probe length (in mm)
												Electrode length
												51, 52 = Limit value measurement with number of switching points
KFX = Capacitive filling level probe with integrated evaluation unit in the connection head												

Position 2

Value	Measuring principle
51	1 Switching point
52	2 Switching points

Position 3

	Electrode length	Application recommendation
KFS-5	5	For very adhesive products, like glue or pastes
	15	Version for universal use
	30	For materials with low dielectric constant (DC), bulk materials with low density

Position 4

Value	Probe length
Material	Max. length
GFK	2000 mm
PTFE	2000 mm
PEEK	400 mm
PVDF	2000 mm
PVC	2000 mm

Position 5

Position of the switching points (depends on the model).

TYPE CODE KFX-5...

Position 6 Housing material

Material	Probe	Housing / Process connection
No indication	Fiberglass reinforced plastic (GFK)	Fiberglass reinforced plastic (GFK)
GFK	Fiberglass reinforced plastic	Fiberglass reinforced plastic
GFK/VAa	Fiberglass reinforced plastic	Stainless steel No. 1.4301 (AISI 304)
GFK/VAb	Fiberglass reinforced plastic	Stainless steel No. 1.4305 (AISI 303)
GFK/VAc	Fiberglass reinforced plastic	Stainless steel No. 1.4404 (AISI 316L)
GFK/AL	Fiberglass reinforced plastic	Aluminum
PTFE	Polytetrafluoroethylene FDA 21 CFR 177.1550	Polytetrafluoroethylene
PTFE/AL	Polytetrafluoroethylene FDA 21 CFR 177.1550	Aluminum
PTFE/VAa	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4301 (AISI 304)
PTFE/VAb	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4305 (AISI 303)
PTFE/VAc	Polytetrafluoroethylene FDA 21 CFR 177.1550	Stainless steel No. 1.4404 (AISI 316L)
PTFE/MS	Polytetrafluoroethylene FDA 21 CFR 177.1550	Brass chrome or nickel

Position 7

Value	Probe diameter
D08	8 mm
D10	10 mm
D12	12 mm
D13	13 mm
D16	16 mm

Position 8

Value	Process connection
PHG1	G 1" Connection head
PHG3/4	G 3/4" Connection head

Position 9

Value	Output function
P	PNP Transistor output
N	NPN Transistor output

Position 10

Value	Output signal
S	Normally open (NO)
Ö	Normally closed (NC)
A	Antivalent (NO + NC)
SÖ	1 canal normally open (NO) + 1 canal normally closed (NC)

Position 11

Value	Special version
No indication	Standard version
E	Special version

Position 12

Value	Electrical connection
Z10	10 m Cable
Z15	15 m Cable
KL	Screw terminals

Position 13

Value	ATEX
StEx	For ATEX Zone 20 (Dust), for ATEX Zone 1 (Gas)
3D	With manufacturer declaration for ATEX Zone 22 (Dust)

**CAPACITIVE, ANALOGUE
LEVEL MEASUREMENT SYSTEM**

TRUE **LεVεL®**

Pages

General Description	22 - 23
Mounting	24
Application example	25
Probe analogue (KFS-1-...)	27 - 29
Evaluation unit analogue (KFA-1-...)	30 - 34
Probes analogue with ATEX-certification	35 - 37

GENERAL DESCRIPTION

TRUE LεVεL®

Level control systems for analogue measurements

The capacitive measurements systems of the ^{TRUE}LεVεL series are designed for analogue measurement. The system comprises:

- Filling level probe KFS-1-...
- Evaluation unit KFA-1-...

Automatic compensation for changes in dielectric constant

The analogue level measurement automatically makes a compensation for the changes in the dielectric constant of the filling material, which is very advantageous for applications with changing products. For the DC-compensation (DC = dielectric constant) a reference measurement is made. For that reason a reference area is in the tip of the probe.

Probe length up to 2000 mm

The probes. **KFS-1-.../** are available from **400 mm** up to **2000 mm** in length. The position and the length of the measuring area are user-definable within the possible effective range and therefore it can be determined for optimising each application.



The available evaluation units are:

- Analogue output KFA-1-...-UL-Y70 = Voltage 0...10 V DC
- Analogue output KFA-1-...-IL4-Y70 = Current 4...20 mA
- Analogue output KFA-1-...-FL-Y70 = Frequency 0...10 kHz

Adjustment of the measurement with empty container

The adjustment of the measurement can be made in the empty-condition. The effective direction of the output signals and LED display can be defined by means of DIP switches. With an adjustable time delay (damper) stop motions can be suppressed.

Additionally a relay output is available, that is related to the reference area. This relay output can be used to prevent a total emptying of the container.

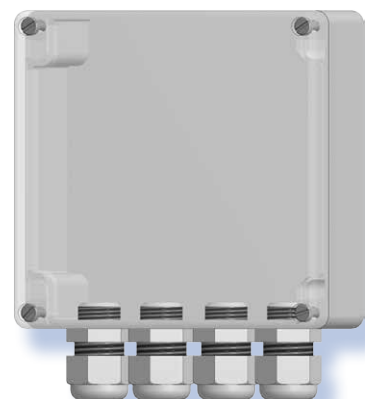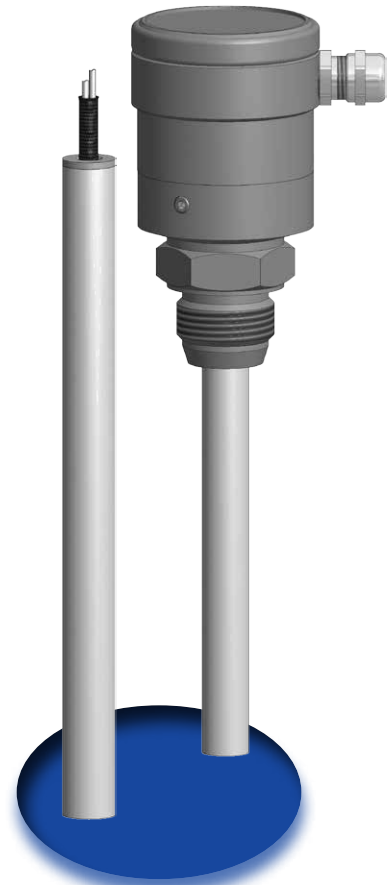

GENERAL DESCRIPTION

TRUE L&VEL®

Probes with process connection:

The analogue rod-probes series is completed with probes with process-connection with different adaptation possibilities:

- **Process connection G1"**
- **Triclamp**
- **Varivent**
- **And many more**

For further information, please see the accessories chapter.

For the possible model variations please see the type code.


Advantages for

TRUE L&VEL®

- Filling level measurements in containers and tubes up to approximately 5 m in diameter
- For liquids and bulk materials $\epsilon_r \geq 1,2$
- Due to its large measuring capacity it is also suitable for non-homogenous media
- With suitable mounting, virtually independent of the discharge cone.
- Probe applicable in an ambient temperature range of -70 °C up to $+250\text{ °C}$
- Insensitive to static discharge
- Because of automatic compensation of the dielectric constants useable for different materials without re-adjustment
- complete adjustment in the empty-condition

MOUNTING

TRUE **LEVEL**®

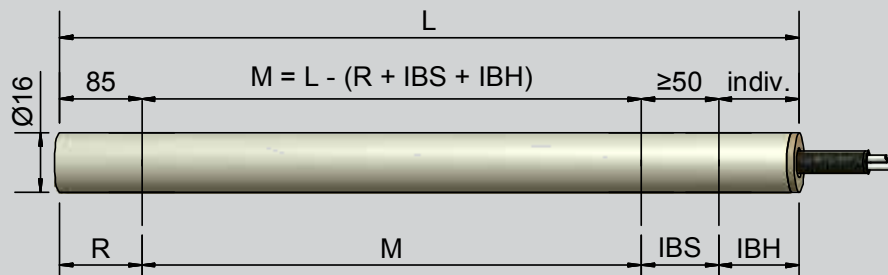

The **analogue probe** consists of a **reference system (R)** at the top of the probe to determine the existing material characteristics. This reference range stretches over 85 mm independent of type.

The reference system (R) does not require a constant cross section of the container. Thus it can project into the cone of the container.

Then follows the **analogue measuring range (M)**. It is customer specified, but with regard to the total length ($L = \text{max. } 2000 \text{ mm}$)


The analogue measuring range of the probe must be mounted in a range of the container without change in diameter of the cross section in order to guarantee the linearity of the output signal.

Changes in cross section lead to non-linearity, due to conical sections for example.

The **inactive range (IBH)**, a minimum of 50 mm, serves to mount the probe.

The non-active range (IBS) from the measuring range to the top of the container (if metal) should be a minimum of 50 mm in order to prevent non-linearity.

With use of a metallic holder the minimum free area between the end of the measuring range and the metallic holder of min. 50 mm should be considered.

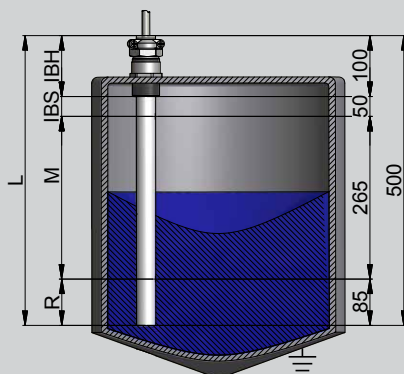


Example for a probe with PTFE body and a total length of $L = 500 \text{ mm}$ with a holder (Art. Nr. 194 000) $IBH = 100 \text{ mm}$. For IBS the min. distance of 50 mm has been applied. This results in an available measuring range $M = 265 \text{ mm}$. The calculation is as follows:

$$M = L - (IBH + IBS + R)$$

$$M = 500 - (100 + 50 + 85)$$

$$M = 265$$

→ KFS-1-85-500-265-PTFE-D16-X02-Y75

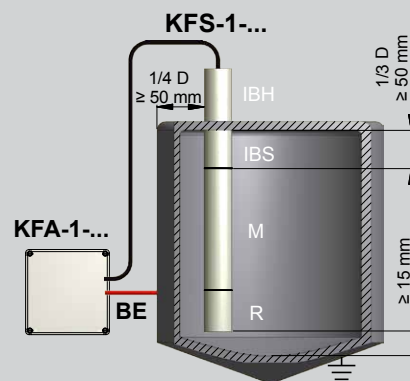


The probe can be mounted **centrally or eccentrically**. For a measurement independent of the filling cone, we recommend that the probe be mounted at a $1/4$ of the diameter. The minimum distance between the upper switching point and the conductive lid of the container is 50 mm.

Connect the BE container earth over the shortest distance!

APPLICATION EXAMPLE

TRUE **LEVEL**®

We use for these analogue level systems our patented three electrode measuring principle. With this measuring principle the container is part of the measurement. The container must be metal or a metal foil has to be fixed on the container (foil length $\geq$ probe length). The resulting large measuring volume is the reason why material depositions on the probe surface are irrelevant for the measurement.

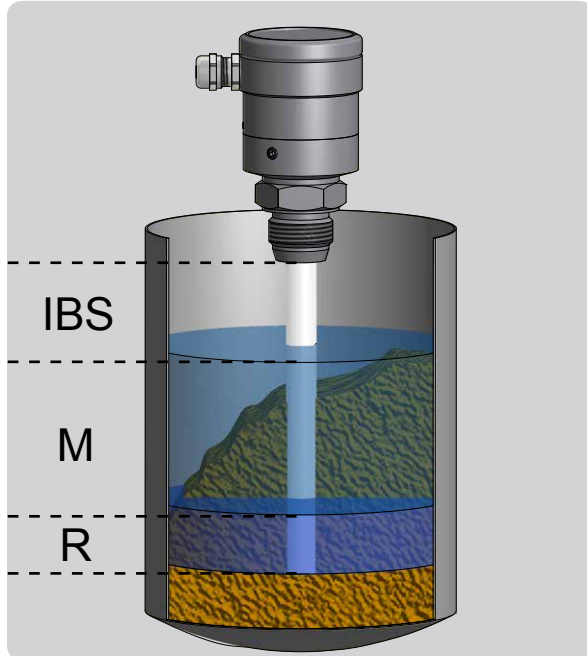

On the left you see a schematic drawing of the measuring ranges of a filling level probe with two measuring points. You see, that the probe measures a range that is like a disc and not just a small area around the probe.

At the tip of the probe there is the reference range, which measures the measuring conditions at the application. This is important for the automatic compensation of changes in the dielectric constant of the material to be detected.


The reference range of the probe can be placed within the cone of a container.

For the measuring range the container diameter must be the same over the whole measuring range. This is important to guarantee the linearity of the measurement.

These analogue level systems are used for a large number of different applications. They indicate the actual level control of bulk material or liquids. They are applied in various industries, so for instance:

FOOD INDUSTRY, CHEMICAL INDUSTRY, PHARMACEUTICAL INDUSTRY, IN PACKAGING INDUSTRY, AUTOMOTIVE TECHNOLOGY AND MUCH MORE.

They measure the level in glue containers or in the correspondent storage tanks. They are used for level control in dosing systems which for example dispense glue or ink or fill-in products in packaging units.

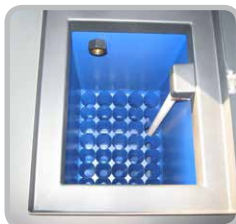

**CAPACITIVE, ANALOGUE
LEVEL MEASUREMENT SYSTEM**

TRUE **LεVεL®**

Probe, analogue (KFS-1-...)	28
Probe with process-connection-head, analogue (KFS-1-...-PHG1-...)	29



Y75

TRUE L&VEL® Capacitive Filling Level Probe - KFS With analogue measuring range


- For connection to the capacitive amplifier KFA-1-...-Y70
- Housing material: See below, Ø 16 mm
- Probe length max. 2000 mm, version with PEEK body max. 400 mm.
- Automatic compensation of changes of the dielectric constant



Technical data

Active Zone [M]	Type dependent	Type dependent	Type dependent
Type for evaluation unit Y70	KFS-1-85"-L"-M"-GFK-D16-X02-Y75	KFS-1-85"-L"-M"-PTFE-D16-X02-Y75	KFS-1-85"-L"-M"-PEEK-D16-X02-Y75
Permitted ambient temperature (for active zone)	-70...+200 °C	-70...+250 °C	-70...+250 °C
Degree of protection IEC 60529 (probe)	IP 67	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2	EN 60947-5-2
Connection cable to the evaluation unit KFA-1-...-Y70	2 m coax-cable with connectors	2 m coax-cable with connectors	2 m coax-cable with connectors
Housing material	GFK	PTFE (FDA 21 CFR 177.1550)	PEEK (FDA 21 CFR 177.2415)
Housing material active zone	GFK	PTFE (FDA 21 CFR 177.1550)	PEEK (FDA 21 CFR 177.2415)

Accessories for mounting (not delivered with the probe) please see our selection of accessories.

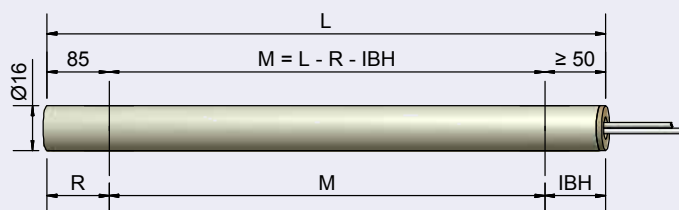

Technical data for connectors on request.

Please determine the total length "L" and the measuring range "M" when ordering.

Other housing materials for the active zone (probe), like PVDF or PE on request.



TRUE LeVeL Capacitive Filling Level Probe - KFS With analogue measuring range


- For connection to the capacitive amplifier KFA-1-...-Y70
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection made of stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm
- Automatic compensation of changes of the dielectric constant




Technical data

Active Zone [M]	Type dependent	Type dependent
Type	KFS-1-85-“L“-“M“-GFK/VAc-D16-PHG1-X00-Y70	KFS-1-85-“L“-“M“-PTFE/VAc-D16-PHG1-X00-Y70
Permitted ambient temperature	-25...+100 °C	-25...+100 °C
Permitted ambient temperature (for active zone)	-25...+150 °C	-25...+150 °C
Degree of protection IEC 60529 (housing)	IP 67	IP 67
Degree of protection IEC 60529 (connection cable)	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection to the evaluation unit KFA-1-...-Y70	Sockets within the connection head	Sockets within the connection head
Housing material	VA n. 1.4404 / AISI 316L (FDA conform)	VA n. 1.4404 / AISI 316L (FDA conform)
Housing material active zone	GFK	PTFE (FDA 21 CFR 177.1550)
Pressure	25 bar	2 bar
Accessories:		
For evaluation unit KFA-1-...-Y70:	Plug connection Y75 / Y75, 2 m cable length, # 66101201, is not delivered with the probe	
For evaluation unit KFA-1-...-Y70:	Plug connection Y75 / Y75, 5 m cable length, # 66101202, is not delivered with the probe	
For matching accessories please see our selection of accessories.		

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

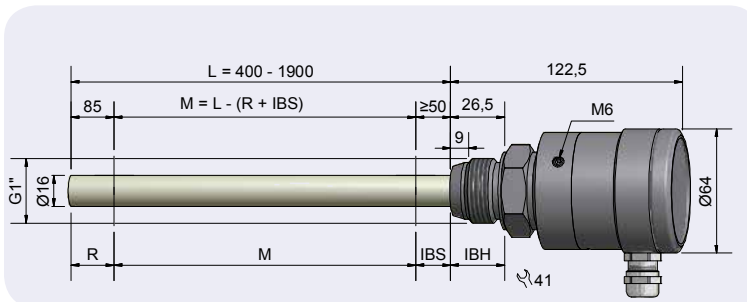

Connection sockets within the head connection

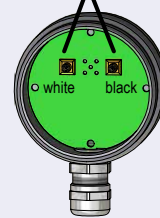

Please determine the total length "L" and the measuring range "M" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.

Made in Germany

**CAPACITIVE, ANALOGUE
LEVEL MEASUREMENT SYSTEM**

TRUE **LεVεL®**

Evaluation unit, analogue with frequency output (KFA-1-...-FL-...)	32
Evaluation unit, analogue with current output (KFA-1-...-IL-...)	33
Evaluation unit, analogue with voltage output (KFA-1-...-UL-...)	34



TRUE L&VEL® Capacitive Evaluation Unit Analogue frequency output 0...10 kHz



- For capacitive level probes with analogue measuring range KFS-1-...-Y75
- Operating voltage 18...36 V DC
- Potential-free change over contact as signal output
- For materials with ϵ_r 1,2...30



Technical data

Output function	Analogue
Type Analogue	KFA-1-200-XXL-FL-Y70
Art.- No.	AF 0125
Type Analogue	KFA-1-500-XXL-FL-Y70
Art.-No.	AF 0126
Type Analogue	KFA-1-1000-XXL-FL-Y70
Art.-No.	AF 0127
Type Analogue	KFA-1-2000-XXL-FL-Y70
Art.-No.	AF 0128
Operating voltage (U_B)	18...36 V DC
Permitted residual ripple max.	25 %
Analogue output	0...10 kHz / TTL-level
Power consumption (outputs no-load)	Typ. 3 W
Permitted ambient temperature	-25...+55 °C
LED-Display	Green / U_B standby
LED-Display	Green-yellow / filling level-tendency
Protective circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2*
Connection	Sockets
Housing material	ABS

*Where applicable

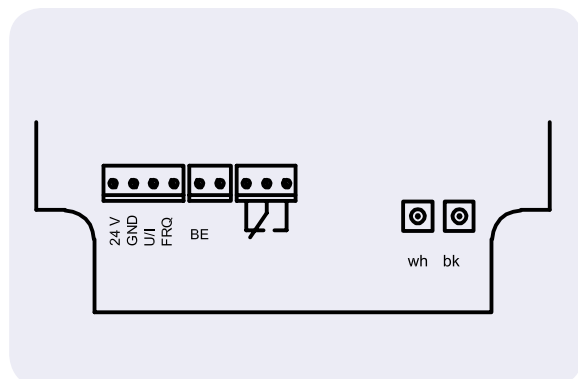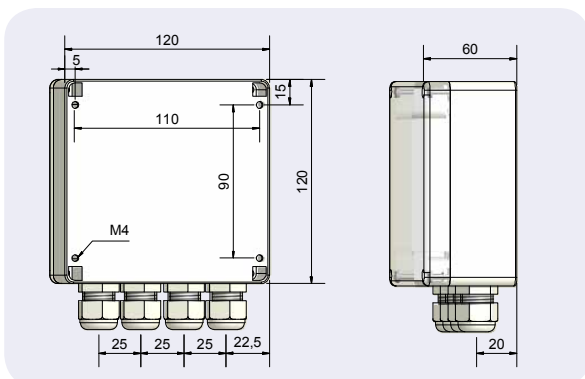



TRUE LeVeL Capacitive Evaluation Unit Analogue current output 0...10 V



- For capacitive level probes with analogue measuring range KFS-1-...-Y75
- Operating voltage 18...36 V DC
- Potential-free change over contact as signal output
- For materials with ϵ_r 1,2...30



Technical data

Output function	Analogue
Type Analogue	KFA-1-200-XXL-IL-4-Y70
Art.- No.	AF 0129
Type Analogue	KFA-1-500-XXL-IL-4-Y70
Art.-No.	AF 0130
Type Analogue	KFA-1-1000-XXL-IL-4-Y70
Art.-No.	AF 0131
Type Analogue	KFA-1-2000-XXL-IL-4-Y70
Art.-No.	AF 0132
Operating voltage (U_B)	18...36 V DC
Permitted residual ripple max.	25 %
Analogue output	0...10 V
Load resistance (R_L)	$\leq 600 \Omega$
Power consumption (outputs no-load)	Typ. 3 W
Permitted ambient temperature	-25...+55 °C
LED-Display	Green / U_B standby
LED-Display	Green-yellow / filling level
Protective circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2*
Connection	Sockets
Housing material	ABS

*Where applicable

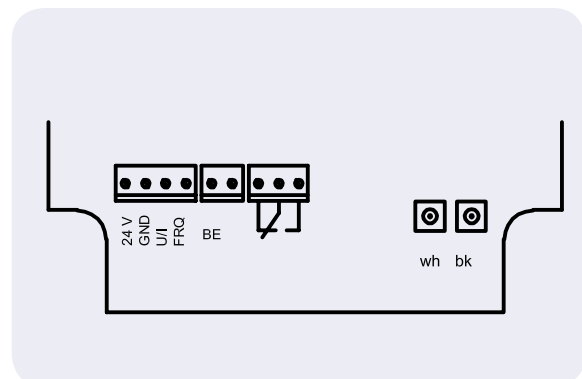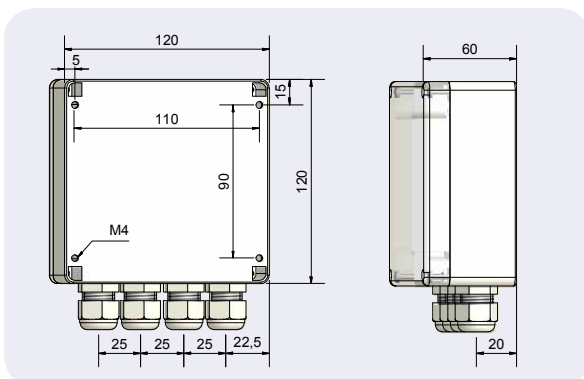

Made in Germany



TRUE L&VEL® Capacitive Evaluation Unit Analogue voltage output 0...10 V



- For capacitive level probes with analogue measuring range KFS-1-...-Y75
- Operating voltage 18...36 V DC
- Potential-free change over contact as signal output
- For materials with ϵ_r 1,2...30



Technical data

Output function	Analogue
Type Analogue	KFA-1-200-XXL-UL-0-Y70
Art.- No.	AF 0133
Type Analogue	KFA-1-500-XXL-UL-0-Y70
Art.-No.	AF 0134
Type Analogue	KFA-1-1000-XXL-UL-0-Y70
Art.-No.	AF 0135
Type Analogue	KFA-1-2000-XXL-UL-0-Y70
Art.-No.	AF 0136
Operating voltage (U_B)	18...36 V DC
Permitted residual ripple max.	25 %
Analogue output	0...10 V
Load resistance (R_L)	$\geq 2 \text{ k}\Omega$
Power consumption (outputs no-load)	Typ. 3 W
Permitted ambient temperature	-25...+55 °C
LED-Display	Green / U_B standby
LED-Display	Green-yellow / filling level
Protective circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2*
Connection	Sockets
Housing material	ABS

*Where applicable

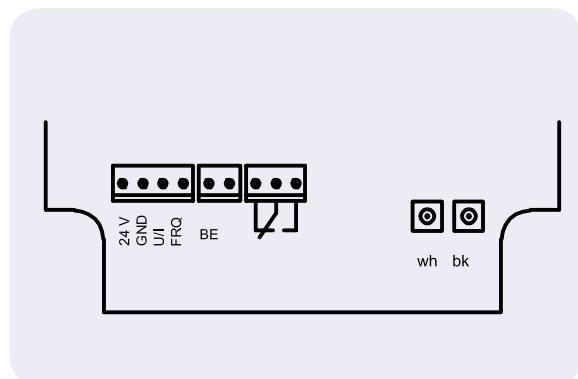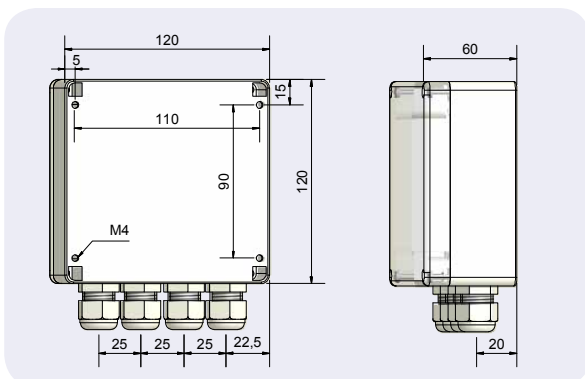

Made in Germany

CAPACITIVE, ANALOGUE
LEVEL MEASUREMENT SYSTEM

TRUE **LεVεL**®



Pages

General information - ATEX

36

Probes analogue, with ATEX-certification

37

GENERAL DESCRIPTION - ATEX

TRUE **LeVeL**®

This capacitive measurement is based on the generation of an electric field between Container and probe. Herewith a "measuring capacitor" is formed. Within this measuring capacitor the filling material works as a dielectric that changes its capacity. These capacity changes are electronically evaluated and are converted into the desired output signals.

Basic configuration of the Analogue Measuring System:

- Probe + Connection Cable + Electronic Evaluation Unit


System with separate evaluation unit:

Probe

The probe is a passive component. With the ATEX certified version the housing material of the probe must be PTFE and stainless steel for the connection head. The connection head provides a 1" process connection.


Electronic Evaluation Unit

The Electronic Evaluation Unit is separate and must be installed outside of the area with risk of explosion.

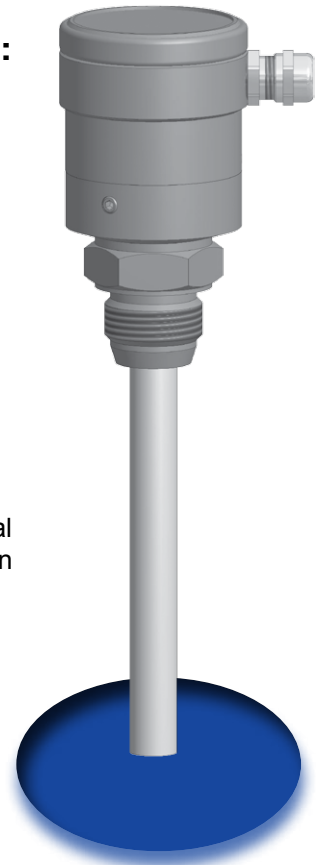

Schematic illustration of how to mount the system:

Correlation of the capacitive level measuring systems for dust Ex zones 20, 21 and 22

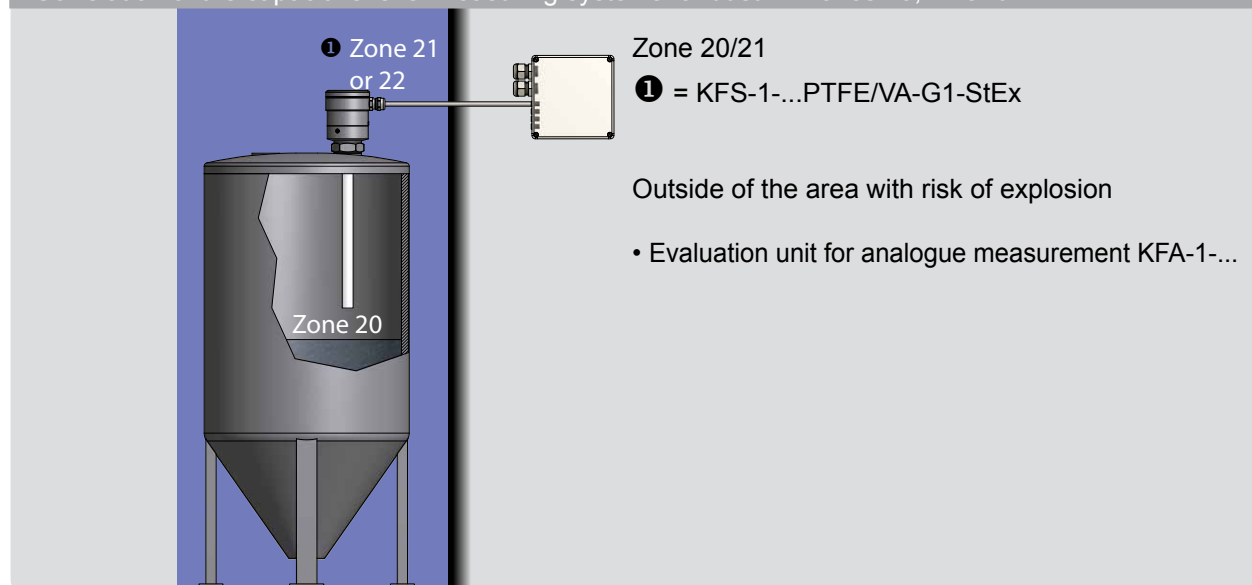



TRUE LeVeL Capacitive Filling Level Probe - KFS - ATEX With analogue measuring range

- For connection to the capacitive amplifier KFA-1-...-Y70
- For use in areas with the risk of dust explosion, zone 20
- For use in areas with the risk of gas explosion, zone 1
- Housing material (active zone): PTFE, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm
- Automatic compensation of changes of the dielectric constant

BVS 05 ATEX E 185	IECEx BVS 07.0032
Ex II 2G Ex mb II T4	Ex mb II T4
Ex II 1/2 D IP 67 T 110°C	Ex tD A20/21 IP 67 T 110°C



Technical data


Active zone [M]	Type dependent
Type	KFS-1-"L"- "M"-PTFE/VA-1"-StEx
Permitted ambient temperature	-20...+100 °C
Degree of protection IEC 60529	IP 67*
Norm	EN 60947-5-2
Connection to the evaluation unit KFA-1-...-Y70	Sockets within the connection head
Housing material	VA No. 1.4404 / AISI 316L (FDA conform)
Housing material (active Zone)	PTFE (FDA 21 CFR 177.1550)
Pressure	3 bar

Accessories:


For evaluation unit KFA-1-...-Y70:	Plug connection Y75 / Y75, 2 m cable length, # 66101201, is not delivered with the probe
For evaluation unit KFA-1-...-Y70:	Plug connection Y75 / Y75, 5 m cable length, # 66101202, is not delivered with the probe

For matching accessories please see our selection of accessories.

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

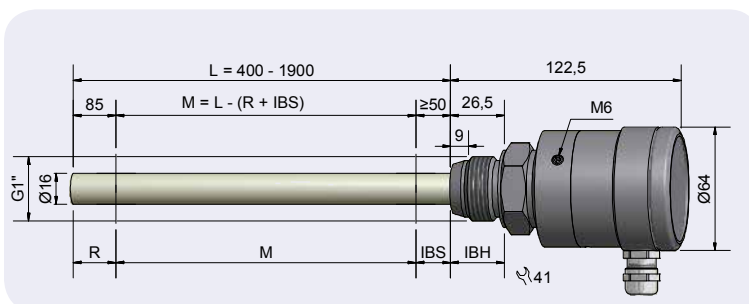

Connection sockets within the head connection

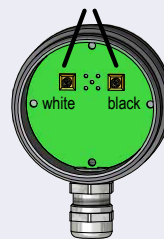

Please determine the total length „L“ and the measuring range „M“ when ordering.

CAPACITIVE, BINARY LEVEL MEASUREMENT SYSTEM

PER **L&VEL®**

Pages:

General description	40
Technology	41
Mounting	42
Application example	43 - 44
Probes binary with 1, 2, 3 or 4 switching points	45 - 49
Probes binary with process-connection-head	50 - 52
Probes binary with special design	53 - 60
Evaluation Unit binary for probes with 1, 2, 3 or 4 switching points	61 - 72
Probes binary with permanently linked evaluation Unit, KFK	73 - 78
Probes binary with process-connection-head, KFX	79 - 84
Probes binary with ATEX-certification	85 - 92

GENERAL DESCRIPTION

Level control system for limit value measurements

The **PERLεVεL** capacitive measuring systems are designed for limit value measurements of filling levels. The system comprises:

- Filling level probe KFS-5...-
- Evaluation electronics KFA-5-...


Probes with 1, 2, 3 or 4 limit value switching points

The probes KFS-5-... are available from 100 mm up to 2000 mm in length. They are available with 1, 2, 3 or 4 fixed or variable switching points. The position of the fixed and the variable limit value switching points are user-definable within the possible area and therefore they can be determined for optimal matching of each application.


The fixed limit values are determined by means of the defined measuring ranges. The limit value signals are practically independent of changes of the dielectric constant of the filling material.

Probe length up to 2000 mm max.

The probes KFS-5-... are available from 100 mm up to 2000 mm in length

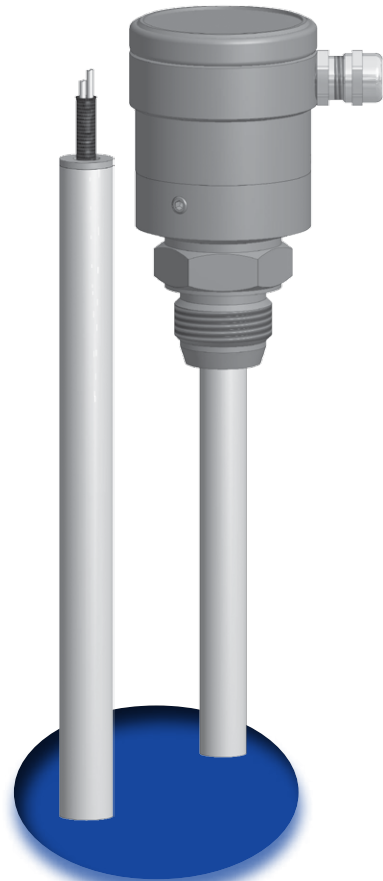

The available evaluation units are:

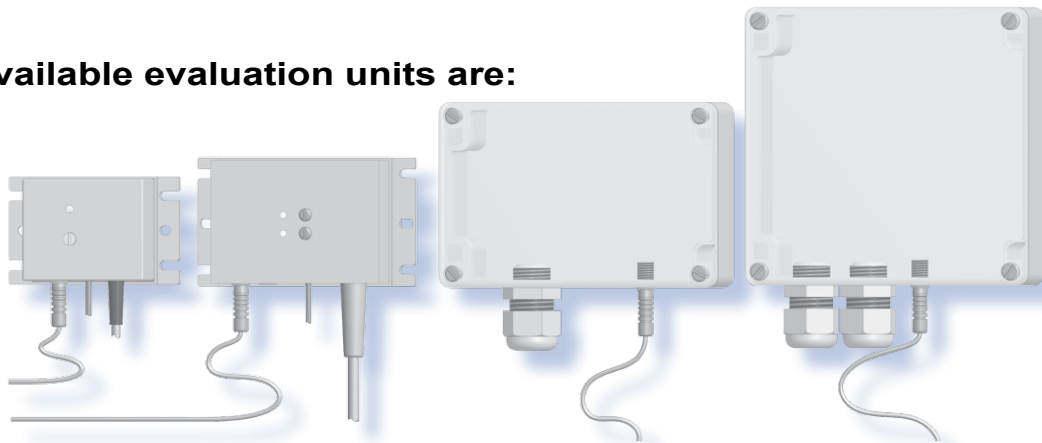

- One point evaluation unit: KFA-5-1-...
- Two point evaluation unit: KFA-5-2-...
- Four point evaluation unit: KFA-5-4-...

TECHNOLOGY

PER **L&VEL**®

Master/Slave Function

The evaluation units with 4 switching points can be extended for further switching points by use of the Master/Slave principle. The models are the same. The coding for the master and slave mode operation can easily be made by the user. Each slave unit provides 4 further switching points.

Compact Level probes with 1 or 2 fixed limit value switching points KFX-5...

In addition, we offer compact-probes with process-connection-head KFX -... The evaluation electronics are integrated into the connection-head. Current variations available:

- KFX-5...- with 1 or 2 fixed limit value switching points

Process-connection with different adaptation possibilities:

The level probes are available with different process connections and there is a choice of adapters, for instance:

- Process connection G1"
- Triclamp
- Varivent

For further information, please see the accessories chapter.


Advantages:

PER **L&VEL**®

- Filling level measurements in containers and tubes up to approximately 5 m in diameter
- For liquids and bulk materials $\epsilon_r \geq 1,2$
- Due to its large measuring capacity it is also suitable for non-homogenous media
- With the suitable mounting, virtually independent of the discharge cone
- Probes suitable for ambient temperature ranges of -70 °C up to $+250\text{ °C}$
- Insensitive to static discharge
- Suitable for detection of highly viscous, adhesive products (glues or similar)
- Suitable for products from $\epsilon_r = 1,2$ – also for extremely low filling density (e. g. polystyrene)
- Negligible influence on the measurement from deposits on the sensor
- Suitable for all container sizes
- Fixed limit values independent from changes in the dielectric constant
- Multiple measurement points without influence from one to another
- Simple adjustment („blind“-adjustment)

MOUNTING

KFS-5... or KFX-5... probe with fixed switching points (KFX-5... 2 switching points max.)

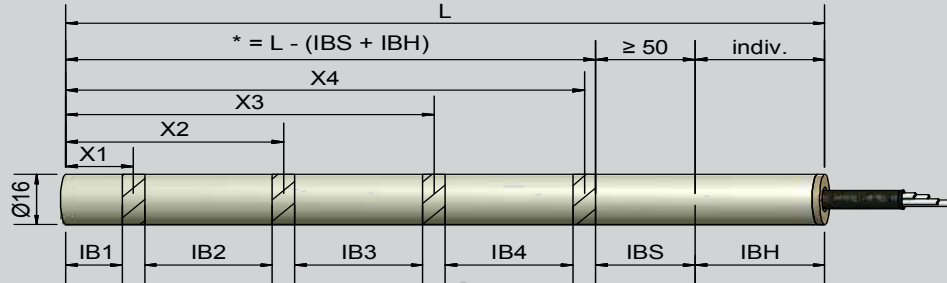

The limit probe can be equipped with one, two, three or four fixed switching points.

The first switching point is normally placed 15 mm from the tip of the probe.


Dependent on the selected model KFS-51(2; 3 or 4) The position of the switching points, X2, X3 or X4, can be determined according to the customer's specifications. This value is defined within the probe order which makes the probe ideal for the client's application.

A minimum distance of 50 mm between the switching points has to be taken into consideration (IBⁿ).

The **inactive range (IBH)**, a minimum of 50 mm, allows for the mounting of the probe.

The non-active range (IBS) from the last switching point to the top of the container (if metal) should be not less than 50 mm in order to prevent measuring failures.

With use of a metallic holder the minimum free area between the end of the last switching point and the metallic holder is a min. 50 mm which should be taken into account..

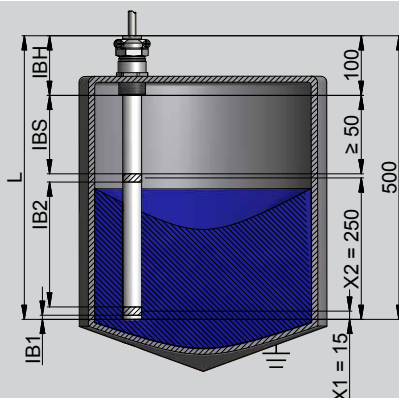

Example for a probe with 2 switching points, PTFE body and a total length $L = 500$ mm with a holder (Art. Nr. 194 000) $IBH = 100$ mm. For $IBS = 150$ mm, the min. distance of 50 mm has been applied. The first switching point $X1$ is normally at 15 mm measured from the tip and the second switching point has been selected at 250 mm.


The calculation is as follows:

$$L = X2 + IBS + IBH$$

$$L = 250 + 150 + 100$$

$$L = 500$$

→ KFS-52-15-500-15/250-PTFE-D16-X02-Y75

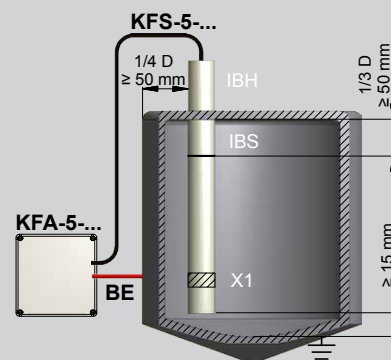

The probe can be mounted centrally or eccentrically. For a measurement independent of the filling cone, we recommend that the probe be mounted at a $\frac{1}{4}$ of the diameter. The minimum distance between the upper switching point and the conductive lid of the container is 50 mm.


Connect the BE container earth over the shortest distance!

APPLICATION EXAMPLE

PER **L&VEL**®

This measurement system can be used in many applications. For example in the the Food, Pharmaceutical, Chemical or Packaging Industry and many more. It measures levels in containers for glue or their related storage container. Moreover they are used for level controls in container for dosing systems

with varied tasks, like applying glue or ink, further for the dosing in packaging units. We use for these analogue level systems our patented three electrode measuring principle. With this measuring principle the container is part of the measurement. The container must be metal or a metal foil has to be fixed on the container (foil length $\geq$ probe length). The resulting large measuring volume is the reason why material depositions on the probe surface are irrelevant for the measurement.

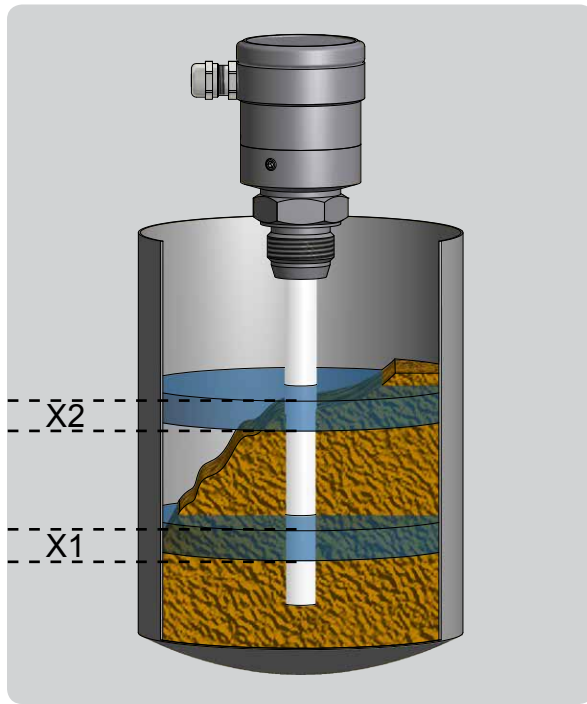

On the left you see a schematic drawing of the measuring ranges of a filling level probe with two measuring points. You see, that the probe measures a range that is like a disc and not just a small area around the probe.

With application that have a grid at the container bottom the measurement with binary level probes can be made directly at the top edge of the grid. This means measured on- or off switching point of the probe is the level at the grid top edge.



Also some cm deposition of glue do not influence the measurement. Switching point displacement max. $\pm 0,5$ cm.



Measurement directly at grid top edge possible!

APPLICATION EXAMPLE

PER **L&V&L**[®]



Example hot melt glue

The capacitive filling level probes measure the levels of hot glue reliable whatever the state of the materials within the container. It does not matter if the glue is in a molten, partly molten or granulate form or in a mixed state within the container.



The probe also switch off reliably even if there is still a glue thread connection between probe and the residual glue at the bottom of the empty container.

Reliable level Measurement whatever the state of the material is.

Reliable switch-off even of residual glue thread.

Our patented measuring method allows temperature and filling measurement with the same probe. This function is available on request.



Glue Coating System

**CAPACITIVE, BINARY
LEVEL MEASUREMENT SYSTEM**

PER L&VEL®

Seiten

Probes binary without process-connection-head

44 - 47

Probes binary with process-connection-head

48 - 50



Y55



Y75



Y76



Y95


PER LeV&L Capacitive Filling Level Probe - KFS 1 Limit value switching point

- For connection to the capacitive amplifier KFA-5-...-Y...
- Housing material: See below, Ø 16 mm
- Probe length max. 2000 mm



Technical data

Active Zone [mm]	10...25, related to probe tip	10...25, related to probe tip
Type for evaluation unit Y50	KFS-51-15-"L"-15-GFK-D16-X02-Y55	KFS-51-15-"L"-15-PTFE-D16-X02-Y55
Type for evaluation unit Y70	KFS-51-15-"L"-15-GFK-D16-X02-Y75	KFS-51-15-"L"-15-PTFE-D16-X02-Y75
Type for evaluation unit Y70	KFS-51-15-"L"-15-GFK-D16-X02-Y76	KFS-51-15-"L"-15-PTFE-D16-X02-Y76
Type for evaluation unit Y90	KFS-51-15-"L"-15-GFK-D16-X02-Y95	KFS-51-15-"L"-15-PTFE-D16-X02-Y95
Permitted ambient temperature (for active zone)	-70...+200 °C	-70...+250 °C
Degree of protection IEC 60529 (probe)	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...-Y...	2 m coax-cable with connectors	2 m coax-cable with connectors
Housing material	GFK	PTFE (FDA 21 CFR 177.1550)
Housing material active zone	GFK	PTFE (FDA 21 CFR 177.1550)
Accessories for mounting (not delivered with the probe) please see our selection of accessories.		

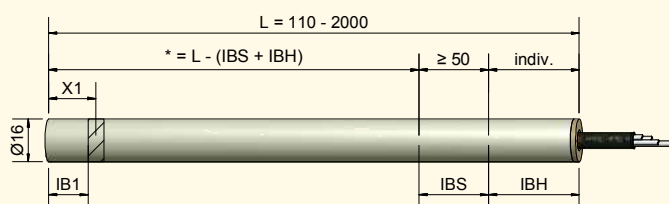

Technical data for connectors on request.

Please determine the total length "L" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.



Y55



Y75



Y76



Y95


PER LeVeL® Capacitive Filling Level Probe - KFS 2 Limit value switching points

- For connection to the capacitive amplifier KFA-5-...-Y...
- Housing material: See below, Ø 16 mm
- Probe length max. 2000 mm



Technical data

Active Zone [mm]	10...25, related to probe tip + 1 x type specific X2	10...25, related to probe tip + 1 x type specific X2
Type for evaluation unit Y50	KFS-52-15"-L"-15/X2-GFK-D16-X02-Y55	KFS-52-15"-L"-15/X2-PTFE-D16-X02-Y55
Type for evaluation unit Y70	KFS-52-15"-L"-15/X2-GFK-D16-X02-Y75	KFS-52-15"-L"-15/X2-PTFE-D16-X02-Y75
Type for evaluation unit Y70	KFS-52-15"-L"-15/X2-GFK-D16-X02-Y76	KFS-52-15"-L"-15/X2-PTFE-D16-X02-Y76
Type for evaluation unit Y90	KFS-52-15"-L"-15/X2-GFK-D16-X02-Y95	KFS-52-15"-L"-15/X2-PTFE-D16-X02-Y95
Permitted ambient temperature (for active zone)	-70...+200 °C	-70...+250 °C
Degree of protection IEC 60529 (probe)	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...-Y...	2 m coax-cable with connectors	2 m coax-cable with connectors
Housing material	GFK	PTFE (FDA 21 CFR 177.1550)
Housing material active zone	GFK	PTFE (FDA 21 CFR 177.1550)
Accessories for mounting (not delivered with the probe) please see our selection of accessories.		

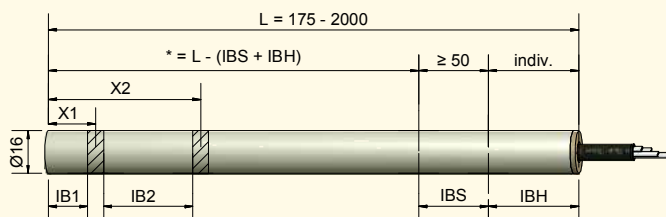

Technical data for connectors on request.

Please determine the total length "L" and the position of the second switching point "X2" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.



Y55



Y75



Y76



Y95


PER LeVeL® Capacitive Filling Level Probe - KFS 3 Limit value switching points

- For connection to the capacitive amplifier KFA-5-...-Y...
- Housing material: See below, Ø 16 mm
- Probe length max. 2000 mm



Technical data

Active Zone [mm]	10...25, related to the probe tip + 2 x type specific X2 / X3	10...25, related to the probe tip + 2 x type specific X2 / X3
Type for evaluation unit Y50	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y55	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y55
Type for evaluation unit Y70	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y75	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y75
Type for evaluation unit Y70	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y76	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y76
Type for evaluation unit Y90	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y95	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y95
Permitted ambient temperature (for active zone)	-70...+200 °C	-70...+250 °C
Degree of protection IEC 60529 (probe)	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...-Y...	2 m coax-cable with connectors	2 m coax-cable with connectors
Housing material	GFK	PTFE (FDA 21 CFR 177.1550)
Housing material active zone	GFK	PTFE (FDA 21 CFR 177.1550)
Accessories for mounting (not delivered with the probe) please see our selection of accessories.		

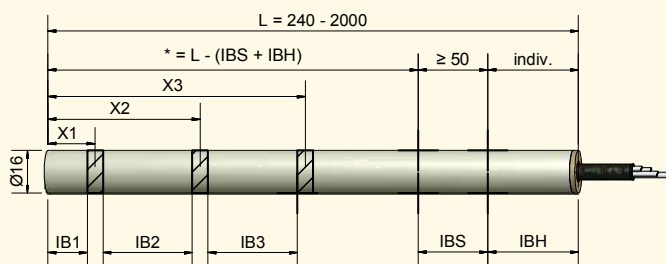

Technical data for connectors on request.

Please determine the total length "L" and the position of the second and third switching point "X2 / X3" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.

Made in Germany



Y55



Y75



Y76



Y95


PER LeVeL® Capacitive Filling Level Probe - KFS 4 Limit value switching points

- For connection to the capacitive amplifier KFA-5-...-Y...
- Housing material: See below, Ø 16 mm
- Probe length max. 2000 mm



Technical data

Active Zone [mm]	10...25, related to the probe tip + 3 x type specific X2 / X3 / X4	10...25, related to the probe tip + 3 x type specific X2 / X3 / X4
Type for evaluation unit Y50	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y55	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y55
Type for evaluation unit Y70	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y75	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y75
Type for evaluation unit Y70	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y76	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y76
Type for evaluation unit Y90	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y95	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y95
Permitted ambient temperature (for active zone)	-70...+200 °C	-70...+250 °C
Degree of protection IEC 60529 (probe)	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...-Y...	2 m coax-cable with connectors	2 m coax-cable with connectors
Housing material	GFK	PTFE (FDA 21 CFR 177.1550)
Housing material active zone	GFK	PTFE (FDA 21 CFR 177.1550)
Accessories for mounting (not delivered with the probe) please see our selection of accessories.		

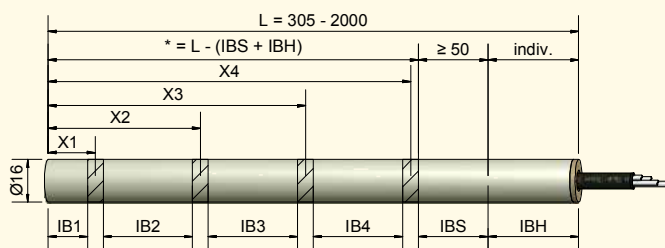

Technical data for connectors on request.

Please determine the total length "L" and the position of the second, third and fourth switching point "X2 / X3 / X4" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.

Made in Germany



PER LeVeL® Capacitive Filling Level Probe - KFS
1 Limit value switching point

- For connection to the capacitive amplifier KFA-5-...
- Housing material (active zone): See below, 16 mm Ø
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. GFK - 2000 mm, PTFE - 1900 mm



Technical data


Active Zone [mm]	10...25, related to the probe tip	10...25, related to the probe tip
Type	KFS-51-15-"L"-15-GFK/VAc-D16-PHG1-X00-Y70	KFS-51-15-"L"-15-PTFE/VAc-D16-PHG1-X00-Y70
Permitted ambient temperature	-25...+100 °C	-25...+100 °C
Permitted ambient temperature (for active zone)	-25...+150 °C	-25...+150 °C
Degree of protection IEC 60529 (Housing)	IP 67	IP 67
Degree of protection IEC 60529 (Screwing* Cable connection)	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection to the evaluation unit KFA-5-..	Sockets within the connection head	Sockets within the connection head
Housing material	VA No. 1.4404 / AISI 316L (FDA conform)	VA No. 1.4404 / AISI 316L (FDA conform)
Housing material (active zone)	GFK	PTFE (FDA 21 CFR 177.1550)
Pressure	25 bar	2 bar

Accessories:


For evaluation unit KFA-5-...-Y50:	Plug connection Y75 / Y55, 2 m cable length, # 66101213, is not delivered with the probe
For evaluation unit KFA-5-...-Y70:	Plug connection Y75 / Y75, 2 m cable length, # 66101203, is not delivered with the probe.

For matching accessories please see our selection of accessories.

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

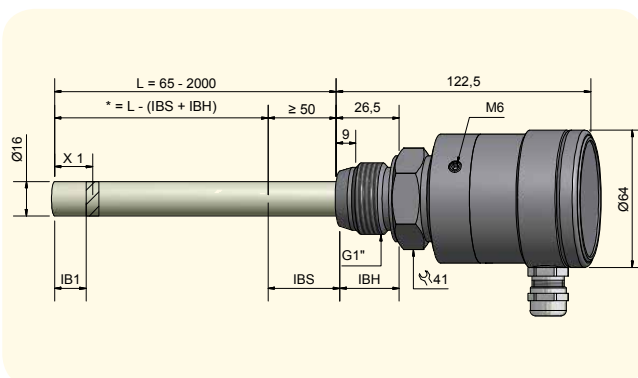

Connection socket within connection head

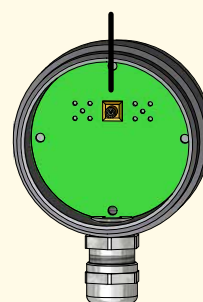

Please determine the total length "L" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.

Made in Germany



PERLeVeL Capacitive Filling Level Probe - KFS 2 Limit value switching points


- For connection to the capacitive amplifier KFA-5-...
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. GFK - 2000 mm, PTFE - 1900 mm




Technical data

Active Zone [mm]	10...25, related to the probe tip + 1 x type specific X2	10...25, related to the probe tip + 1 x type specific X2
Type	KFS-52-15-“L“-15/X2-GFK/VAc-D16-PHG1-X00-Y70	KFS-52-15-“L“-15/X2-PTFE/VAc-D16-PHG1-X00-Y70
Permitted ambient temperature	-25...+100 °C	-25...+100 °C
Permitted ambient temperature (for active zone)	-25...+150 °C	-25...+150 °C
Degree of protection IEC 60529 (Housing)	IP 67	IP 67
Degree of protection IEC 60529 (Screwing* Cable connection)	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection to the evaluation unit KFA-5-...	Sockets within the connection head	Sockets within the connection head
Housing material	VA No. 1.4404 / AISI 316L (FDA conform)	VA No. 1.4404 / AISI 316L (FDA conform)
Housing material (active zone)	GFK	PTFE (FDA 21 CFR 177.1550)
Pressure	25 bar	2 bar
Accessories:		
For evaluation unit KFA-5-...-Y50:	Plug connection Y75 / Y55, 2 m cable length, # 66101242, is not delivered with the probe	
For evaluation unit KFA-5-...-Y70:	Plug connection Y75 / Y75, 2 m cable length, # 66101204, is not delivered with the probe.	
For matching accessories please see our selection of accessories.		

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

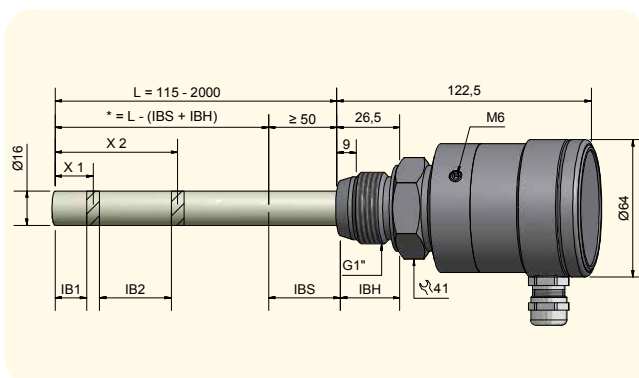

Connection sockets within connection head

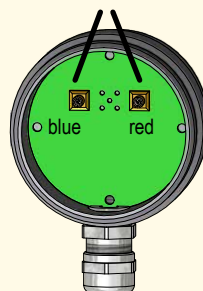

Please determine the total length "L" and the position of the second switching point "X2" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.

Made in Germany



PER LeVeL® Capacitive Filling Level Probe - KFS 3 Limit value switching points


- For connection to the capacitive amplifier KFA-5-...
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. GFK - 2000 mm, PTFE - 1900 mm



Technical data

Active Zone [mm]	10...25, related to probe tip + 2 x type specific X2 / X3	10...25, related to probe tip + 2 x type specific X2 / X3
Type	KFS-53-15-“L“-15/X2/X3-GFK/VAc-D16- PHG1-X00-Y70	KFS-53-15-“L“-15/X2/X3-PTFE/VAc-D16- PHG1-X00-Y70
Permitted ambient temperature	-25...+100 °C	-25...+100 °C
Permitted ambient temperature (for active zone)	-25...+150 °C	-25...+150 °C
Degree of protection IEC 60529 (Housing)	IP 67	IP 67
Degree of protection IEC 60529 (Screwing* Cable connection)	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection to the evaluation unit KFA-5-...	Sockets within the connection head	Sockets within the connection head
Housing material	VA No. 1.4404 / AISI 316L (FDA conform)	VA No. 1.4404 / AISI 316L (FDA conform)
Housing material (active zone)	GFK	PTFE (FDA 21 CFR 177.1550)
Pressure	25 bar	2 bar
Accessories:		
For evaluation unit KFA-5-...-Y70:	Plug connection Y75 / Y75, 2 m cable length, # 66101205, is not delivered with the probe.	
For matching accessories please see our selection of accessories.		

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

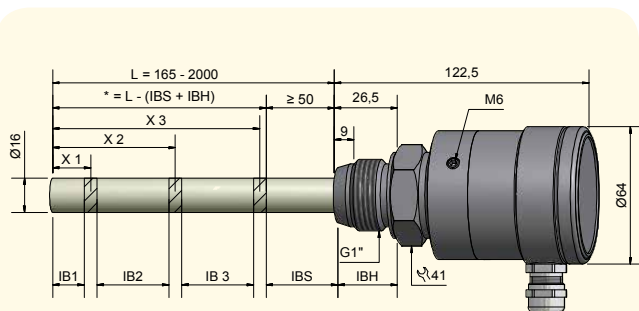

Connection sockets within connection head



Please determine the total length "L" and the position of the second and third switching point "X2 / X3" when ordering.

Other housing materials for the active zone (probe), like PVDF, PEEK or PE on request.

Made in Germany

**CAPACITIVE, BINARY
LEVEL MEASUREMENT SYSTEM**

PER **L&VEL®**

	Pages
General description	52
Probes with special designs	53 - 57

GENERAL INFORMATION


SPECIAL DESIGNS

In this section we describe variants of the capacitive PerLevel System which are distinguished by special housing design.

The details about function and mounting are mentioned in the general information about PerLevel Systems.

The strength of these models are especially relevant with relatively small dosing systems or storage containers. They need little space in the plant and measure the level very precise. The measuring electrodes are optimized for small containers and it is guaranteed, that the outstanding characteristics of these filling level systems are preserved, for instance with regard to the insensitivity with product layers or adhesion at the probe surface as well as with regard to the temperature stability.

These systems are available with 1 or 2 switching points.

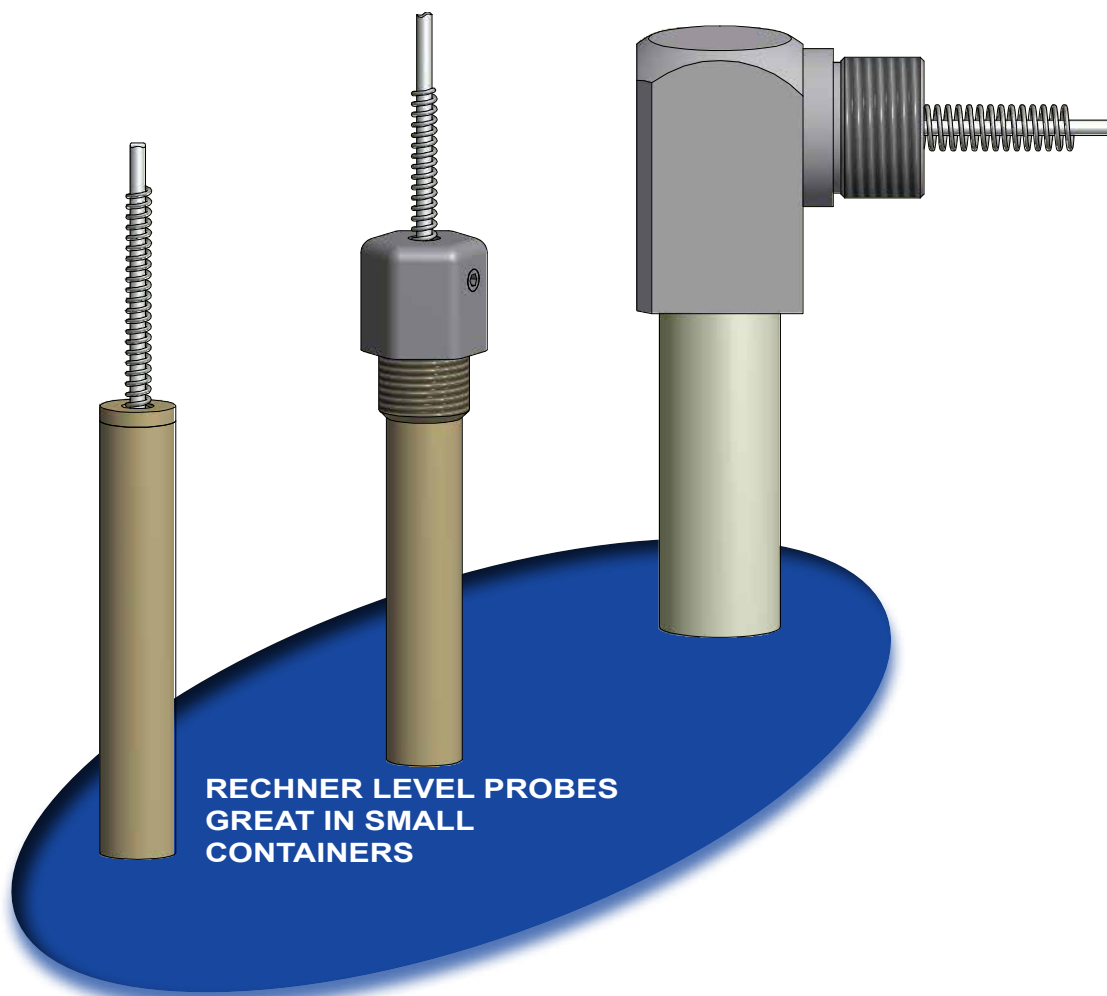



Y55



Y75


PERLeVeL® Capacitive Filling Level Probe - KFS 1 Limit value switching point

- For connection to capacitive amplifiers KFA-5-...-Y50 / Y70
- Housing material: PEEK, Ø 10 mm
- Probe length 60 mm



Technical data

Active zone	15 mm, related to probe tip	15 mm, related to probe tip
Type	KFS-51-15-60-15-PEEK-D10-X01-Y55	KFS-51-15-60-15-PEEK-D10-X02-Y75
Art.-No.	KF 0331	KF 0277
Permitted ambient temperature	-70...+250 °C	-70...+250 °C
Degree of protection IEC 60529 (Probe)	IP 67	IP 67
Connection cable to the evaluation unit KFA-5-...Y50	1 m FEP, coax-cable with coax-connector	2 m FEP, coax-cable with SMB-connector
Housing material	PEEK (FDA 21 CFR 177.2415)	PEEK (FDA 21 CFR 177.2415)
Housing material active zone	PEEK (FDA 21 CFR 177.2415)	PEEK (FDA 21 CFR 177.2415)

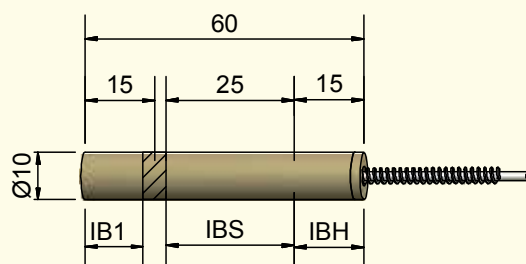

Technical data for connectors on request.



Y55


PER LeVeL® Capacitive Filling Level Probe - KFS
1 Limit value switching point

- For connection to capacitive amplifiers KFA-5-...-Y50
- Housing material: PEEK, Ø 10 mm / M 12 x 1
- Probe length 60 mm



Technical data

Active zone	15 mm, related to probe tip
Type	KFS-51-15-60-15-PEEK-D10-M12-X0E-Y55
Art.-No.	KF 0284
Permitted ambient temperature	-70...+250 °C
Degree of protection IEC 60529	IP 67
Norm	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...-Y50	0,7 m coax-cable with coax-connector
Housing material	Stainless steel VA No. 1.4305 / AISI 303
Active zone	PEEK

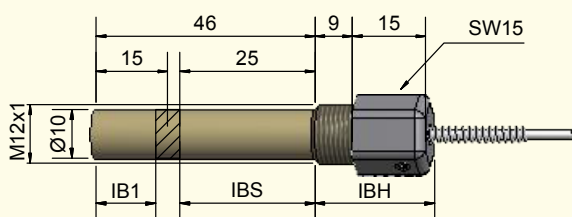

Technical data for connectors on request.



Y75


PERLeVEL® Capacitive Filling Level Probe - KFS
1 Limit value switching point

- For connection to capacitive amplifiers KFA-5-...-Y70
- Housing material: GFK, Ø 10 mm
- Probe length 200 mm



Technical data

Active zone	15 mm, related to probe tip
Type	KFS-51-15-200-15-GFK-D10-X02-Y75
Art.-No.	KF 0285
Permitted ambient temperature	-70...+200° C
Degree of protection IEC 60529 (Probe)	IP 67
Norm	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...Y70	2 m FEP, coax-cable with SMB-connector
Housing material	GFK
Housing material active zone	GFK

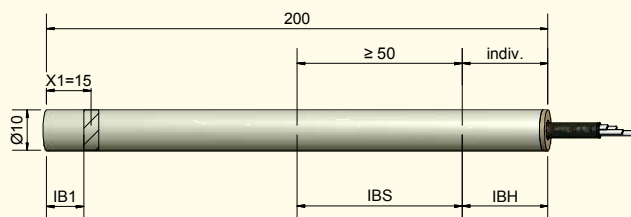

Technical data for connectors on request.



Y55

PER LeVeL® Capacitive Filling Level Probe - KFS


1 Limit value switching point

- For connection to capacitive amplifiers KFA-5-...-Y50
- Housing material: PEEK, Ø 10 mm
- Probe length 100 mm



Technical data

Active zone	15 mm, related to probe tip
Type	KFS-51-15-100-15-PEEK-D10-X02-Y55
Art.-No.	KF 0304
Permitted ambient temperature	-70...+250 °C
Degree of protection IEC 60529 (Probe)	IP 67
Norm	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...Y50	2 m FEP, coax-cable with coax-connector
Housing material	PEEK (FDA 21 CFR 177.2415)
Housing material active zone	PEEK (FDA 21 CFR 177.2415)

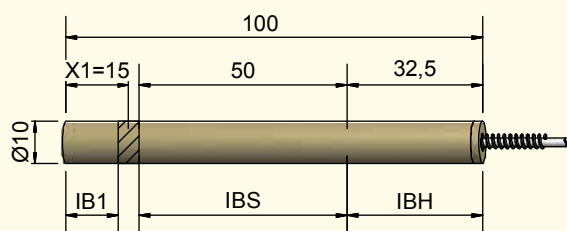

Technical data for connectors on request.



Y55


PERLeVeL® Capacitive Filling Level Probe - KFS 1 Limit value switching point

- For connection to capacitive amplifiers KFA-5-1-...-Y50
- Housing material: GFK, Ø 16 mm
- Probe length 50 mm
- With angled aluminium mounting bracket



Technical data

Active zone	5 mm, related to probe tip
Type	KFS-51-5-54-15-GFK/AL-D16-W-X02-Y55
Art.-No.	KF 0314
Permitted ambient temperature	-70...+200 °C
Degree of protection IEC 60529 (Probe)	IP 67
Norm	EN 60947-5-2
Connection cable to the evaluation unit KFA-5-...Y50	2 m FEP, coax-cable with connector
Housing material mounting bracket	Aluminium
Housing material active zone	GFK

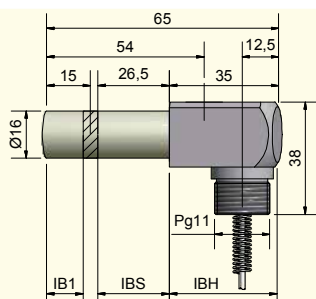

Technical data for connectors on request.

Other housing materials for the active zone (probe), like GFK, PVDF, PEEK or PE on request.

**CAPACITIVE, BINARY
LEVEL MEASUREMENT SYSTEM**

PER L&V&L®

Capacitive evaluation Unit KFA-5...-B-..., 1 switching point	60
Capacitive evaluation Unit KFA-5...-L-..., 1 (2) switching points	61 - 62
Capacitive evaluation Unit KFA-5...-XL-..., 1 (2) switching points	63 - 64
Capacitive evaluation Unit KFA-5...-XXL-..., 4 switching points	65 - 70





PERLeVEL® Capacitive filling level evaluation unit - KFA NPN output

- For capacitive filling level probes with 1 limit value switching point: KFS-51-"L"-15-Y55
- Operating voltage: 18...36 V DC



Technical data

Electrical version	4-wire DC
Output function	Antivalent
Type NPN	KFA-5-1-B-N-A-Z02-Y50
Art. No	AF 0005
Operating voltage (U_B)	18...36 V DC
Voltage drop max. (U_o)	$\leq 2,5$ V
Permitted residual ripple max.	25 %
Operating current (I_a)	2 x 0...250 mA
No-load current (I_o)	Typ. 50 mA
Switching frequency max.	4 Hz
Permitted ambient temperature	-25...+55 °C
LED-Display	Green / yellow
Protective circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2
Connection cable	2 m, PUR, 4 x 0.14 mm²
Housing material	PA

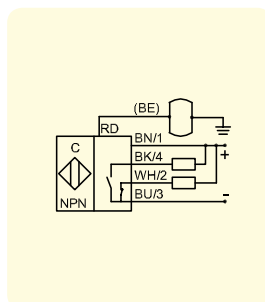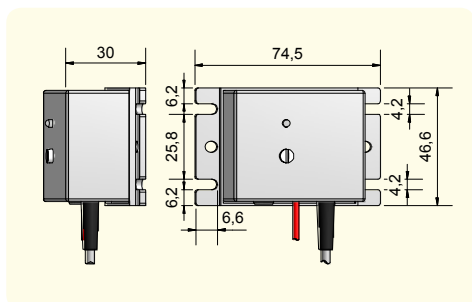





PER LeVeL Capacitive filling level evaluation unit - KFA
NPN output
PNP output

- For capacitive filling level probes with 1 limit value switching point: KFS-51-"L"-15-Y55
- Operating voltage: 18...36 V DC



Technical data

Electrical version	4 wire DC
Output function	Antivalent
Type NPN	KFA-5-1-L-N-A-Z02-Y50
Art. No	AF 0068
Connection diagram No.	3
Type PNP	KFA-5-1-L-P-A-Z02-Y50
Art. No.	AF 0064
Connection diagram No.	6
Operating voltage (U_b)	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V
Permitted ripple max.	25 %
Operating current (I_e)	2 x 0...250 mA
No-load current (I_o)	Typ. 75 mA
Switching frequency max.	4 Hz
Permitted ambient temperature	-25...+70 °C
LED display	Green / yellow
Protection circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2
Connection cable	2 m, PVC, 4 x 0.34 mm ²
Housing material	PA

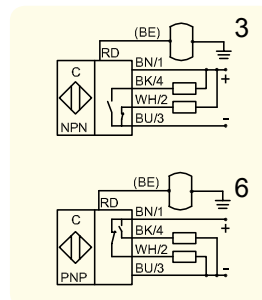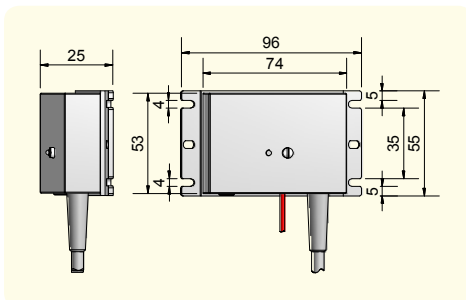



PERLeV&L Capacitive filling level evaluation unit - KFA

NPN output



PNP output

- For 2 capacitive filling level probes with 1 limit value switching point: KFS-51-"L"-15-Y55
- For 1 capacitive filling level probe with 2 limit value switching points KFS-52-"L"-15-X2-Y55
- Operating voltage: 18...36 V DC



Technical data

Electrical version	4 wire DC	4 wire DC
Output function	Normally open	Normally closed
Type NPN	KFA-5-2-L-N-S-Z02-Y50	KFA-5-2-L-N-Ö-Z02-Y50
Art. No	AF 0066	AF 0067
Connection diagram No.	1	2
Type PNP	KFA-5-2-L-P-S-Z02-Y50	KFA-5-2-L-P-Ö-Z02-Y50
Art. No.	AF 0065	AF 0062
Connection diagram No.	3	4
Operating voltage (U_B)	18...36 V DC	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V	≤ 2.5 V
Permitted ripple max.	25 %	25 %
Operating current (I_o)	2 x 0...250 mA	2 x 0...250 mA
No-load current (I_o)	Typ. 75 mA	Typ. 75 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+70 °C	-25...+70 °C
LED display	Green / yellow	Green / yellow
Protection circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection cable	2 m, PVC, 4 x 0.34 mm ²	2 m, PVC, 4 x 0.34 mm ²
Housing material	PA	PA

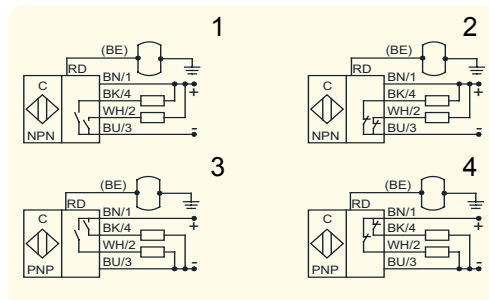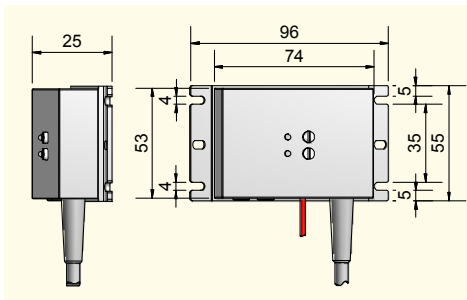





PER LeVeL Capacitive filling level evaluation unit - KFA Relay output

- For connection of one capacitive level probes with 1 limit value switching point KFS-51-...-Y55
- Operating voltage 115 / 230 V AC
- With Combicon connection



Technical data

Output function	1 x change-over contact
Type	KFA-5-1-XL-I-CC-Y50
Art.-No.	AF 0101
Operating voltage (U_B)	105...125 / 207...253 AC 50 / 60 Hz
Contact rating each relay max.	Max. 120 V DC / 1 A-250 V AC / 4 A
Power consumption	Typ. 3 VA
Permitted ambient temperature	-25...+55 °C
LED-display	Green (U_B stand by)
LED-display	Static: green / red (full / empty)
Norm	EN 60947-5-2
Degree of protection IEC 60529	IP 54
Connection	Screwing clamp terminals and sockets
Housing material	ABS

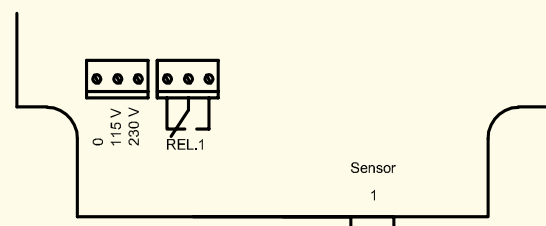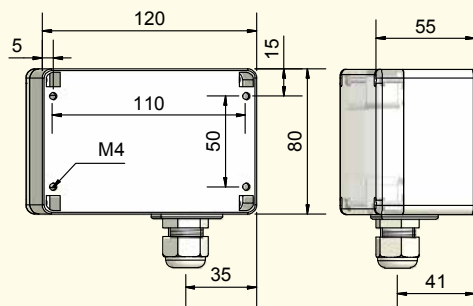





PERLeVEL® Capacitive filling level evaluation unit - KFA Relay output

- For capacitive filling level probes with 2 limit value switching points KFS-52-...-Y55 or 2 probes with 1 limit value switching point KFS-51-...-Y55
- Operating voltage 115 / 230 V AC
- With Combicon connection



Technical data

Output function	2 x change-over contact each channel
Type	KFA-5-2-XL-II-CC-Y50
Art.-No.	AF 0102
Operating voltage (U _B)	105...125 / 207...253 AC 50 / 60 Hz
Contact rating each relay max.	Max. 120 V DC / 1 A - 250 V AC / 4 A
Power consumption	Typ. 3 VA
Permitted ambient temperature	-25...+55 °C
LED-display	Green (U _B stand by)
LED-display	Static: green / red (full / empty)
Norm	EN 60947-5-2
Degree of protection IEC 60529	IP 54
Connection	Screwing clamp terminals and sockets
Housing material	ABS

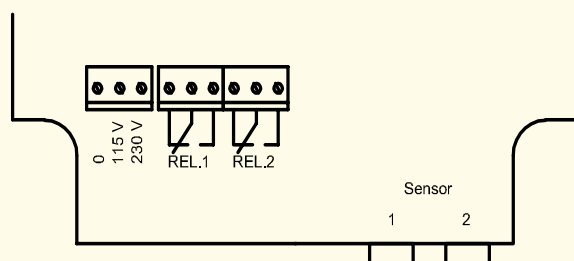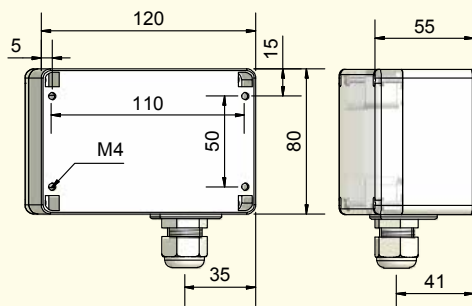





PER LeVeL Capacitive filling level evaluation unit - KFA
NPN output
PNP output

- For capacitive filling level probes with 1, 2, 3 or 4 limit value switching points KFS-5...-Y55
- Operating voltage 18...36 V DC
- With Combicon connection



Technical data

Output function	4 x antivalent
Type NPN	KFA-5-4-XXL-N-A-CC-Y50
Art. No	AF 0086
Type PNP	KFA-5-4-XXL-P-A-CC-Y50
Art. No.	AF 0063
Operating voltage (U_B)	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V
Permitted residual ripple max.	25 %
Operating current (I_B)	0...250 mA each channel
No-load current (I_o)	Typ. 120 mA
Switching frequency max.	4 Hz
Permitted ambient temperature	-25... +55 °C
LED-Display	Green / yellow
Protective circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2
Connection	Screwing clamp terminals and sockets
Housing material	ABS

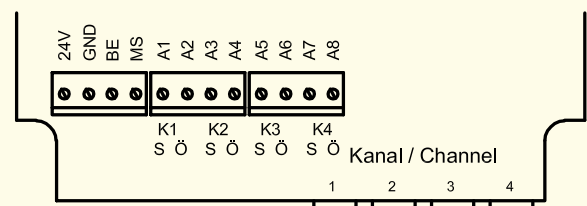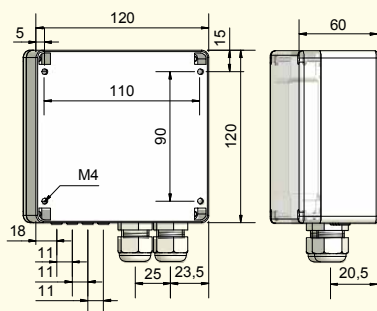

Made in Germany



PERLeV&L Capacitive filling level evaluation unit - KFA

NPN Output



PNP Output

- For capacitive filling level probes with 1, 2, 3 or 4 limit value switching points KFS-5...-Y55
- With sensor break control
- Operating voltage 18...36 V DC
- With Combicon connection



Technical data

Output function	4 x Normally open	4 x Normally closed
Type NPN	KFA-5-4-XXL-N-S-4FB-CC-Y50	KFA-5-4-XXL-N-Ö-4FB-CC-Y50
Art. No	AF 0091	AF 0090
Type PNP	KFA-5-4-XXL-P-S-4FB-CC-Y50	KFA-5-4-XXL-P-Ö-4FB-CC-Y50
Art. No.	AF 0046	AF 0089
Operating voltage (U_B)	18...36 V DC	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V	≤ 2.5 V
Permitted residual ripple max.	25 %	25 %
Operating current (I_e)	0...250 mA each channel	0...250 mA each channel
No-load current (I_o)	Typ. 130 mA	Typ. 130 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+55 °C	-25...+55 °C
LED-Display	Green / yellow	Green / yellow
Protective circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection	Screwing clamp terminals and sockets	Screwing clamp terminals and sockets
Housing material	ABS	ABS

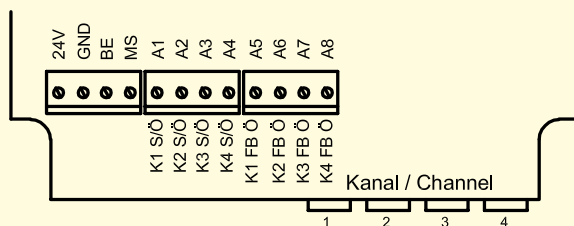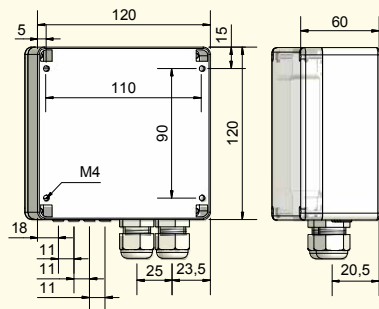

Made in Germany





PER LEVEL Capacitive filling level evaluation unit - KFA NPN Output PNP Output

- For capacitive filling level probes with 1, 2 3 or 4 limit value switching points KFS-5...-Y75
- Operating voltage 18...36 V DC
- With Combicon connection



Technical data

Output function	4 x antivalent
Type NPN	KFA-5-4-XXL-N-A-CC-Y70
Art. No	AF 0096
Type PNP	KFA-5-4-XXL-P-A-CC-Y70
Art. No.	AF 0080
Operating voltage (U_B)	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V
Permitted residual ripple max.	25 %
Operating current (I_B)	0...250 mA each channel
No-load current (I_o)	Typ. 120 mA
Switching frequency max.	4 Hz
Permitted ambient temperature	-25... +55 °C
LED-Display	Green / yellow
Protective circuit	Built-in
Degree of protection IEC 60529	IP 54
Norm	EN 60947-5-2
Connection	Screwing clamp terminals and sockets
Housing material	ABS

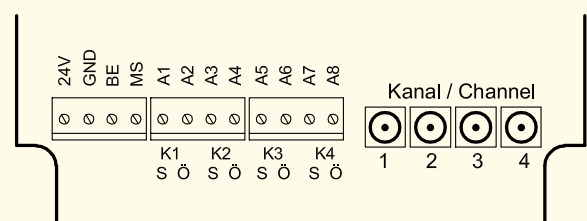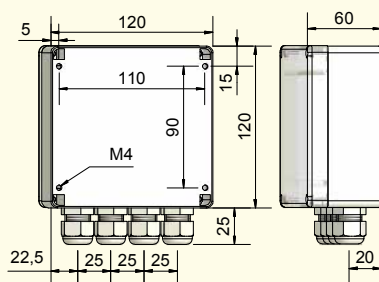

Made in Germany



PER LEVEL Capacitive filling level evaluation unit - KFA

NPN Output



PNP Output

- For capacitive filling level probes with 1, 2, 3 or 4 limit value switching points KFS-5...-Y75
- With sensor break control
- Operating voltage 18...36 V DC
- With Combicon connection



Technical data

Output function	4 x normally open	4 x normally closed
Type NPN	KFA-5-4-XXL-N-S-4FB-CC-Y70	KFA-5-4-XXL-N-Ö-4FB-CC-Y70
Art. No	AF 0097	AF 0098
Type PNP	KFA-5-4-XXL-P-S-4FB-CC-Y70	KFA-5-4-XXL-P-Ö-4FB-CC-Y70
Art. No.	AF 0099	AF 0100
Operating voltage (U_B)	18...36 V DC	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V	≤ 2.5 V
Permitted residual ripple max.	25 %	25 %
Operating current (I_o)	0...250 mA each channel	0...250 mA each channel
No-load current (I_o)	Typ. 130 mA	Typ. 130 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+55 °C	-25...+55 °C
LED-Display	Green / yellow	Green / yellow
Protective circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 54	IP 54
Norm	EN 60947-5-2	EN 60947-5-2
Connection	Screwing clamp terminals and sockets	Screwing clamp terminals and sockets
Housing material	ABS	ABS

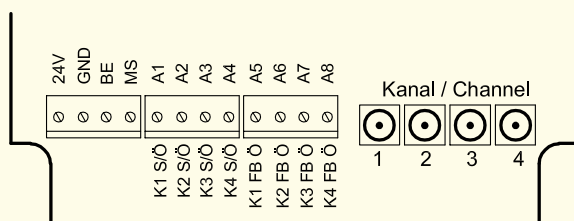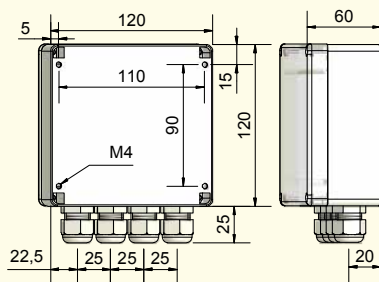

Made in Germany





PER LeVeL Capacitive filling level evaluation unit - KFA Relay output

- For connection of one capacitive level probes with 1 limit value switching point KFS-51-...-Y75
- Operating voltage 115 / 230 V AC
- With wire break control



Technical data

Output function	2 x change-over contact
Type	KFA-5-1-XXL-I-FB-KL-PG9
Art.-No.	972 210
Operating voltage (U_B)	105...125 / 207...253 AC 50 / 60 Hz
Contact rating each relay max.	Max. 120 V DC / 1 A - 250 V AC / 4 A
Power consumption	Typ. 3 VA
Permitted ambient temperature	-25...+55 °C
LED-display	Green (U_B stand by)
LED-display	Static: green / red (full / empty)
Wire break control	Green (flashing)
Norm	EN 60947-5-2
Degree of protection IEC 60529	IP 54
Connection	Screwing clamp terminals and sockets
Housing material	ABS

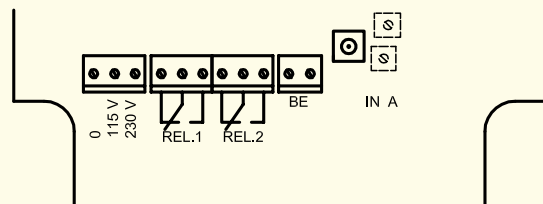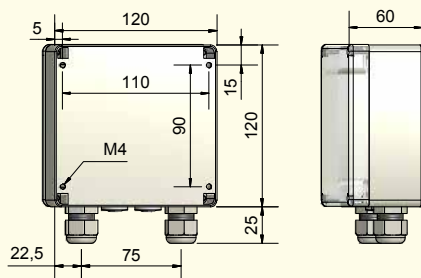

Made in Germany





PERLeVeL Capacitive filling level evaluation unit - KFA Relay output

- For capacitive filling level probes with 2 limit value switching points KFS-52-...-Y75 or 2 probes with 1 limit value switching point
- Operating voltage 115 / 230 V AC



Technical data

Output function	1 x change-over contact each channel
Type	KFA-5-2-XXL-II-KL-PG9
Art.-No.	AF 0049
Operating voltage (U _B)	105...125 / 207...253 AC 50 / 60 Hz
Contact rating each relay max.	Max. 120 V DC / 1 A - 250 V AC / 4 A
Power consumption	Typ. 3 VA
Permitted ambient temperature	-25...+55 °C
LED-display	Green (U _B stand by)
LED-display	Static: green / red (full / empty)
Protective circuit (over temperature)	Built-in
Norm	EN 60947-5-2
Degree of protection IEC 60529	IP 54
Connection	Screwing clamp terminals and sockets
Housing material	ABS

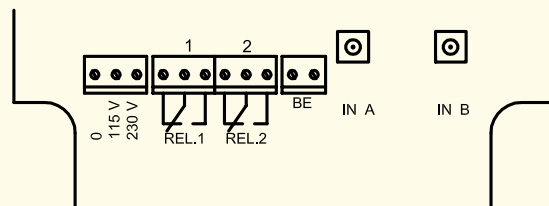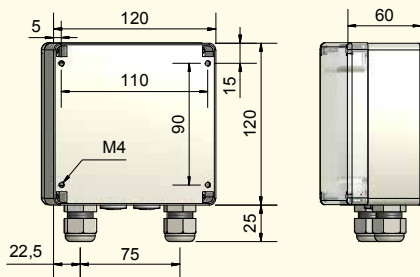

Made in Germany

**CAPACITIVE, BINARY
LEVEL MEASUREMENT SYSTEM**

PER **L&V&L®**

Pages:

General Description	72
Probe with 1 or 2 switching points (evaluation unit and probe permanently linked) KFK-5...-...-	73 - 75

GENERAL DESCRIPTION


LEVEL PROBE AND EVALUATION UNIT PERMANENTLY LINKED TOGETHER KFK-...

In this section we report about a Variant of the PerLevel Systems, where the level probe and the evaluation unit are permanently linked together by means of a cable.

All characteristic features of the PerLevel Systems remain the same, as mentioned under general information. The only difference is the fixed connection.

The omission of the plug connection provides a price advantage.

These systems are available with 1 or 2 switching points.

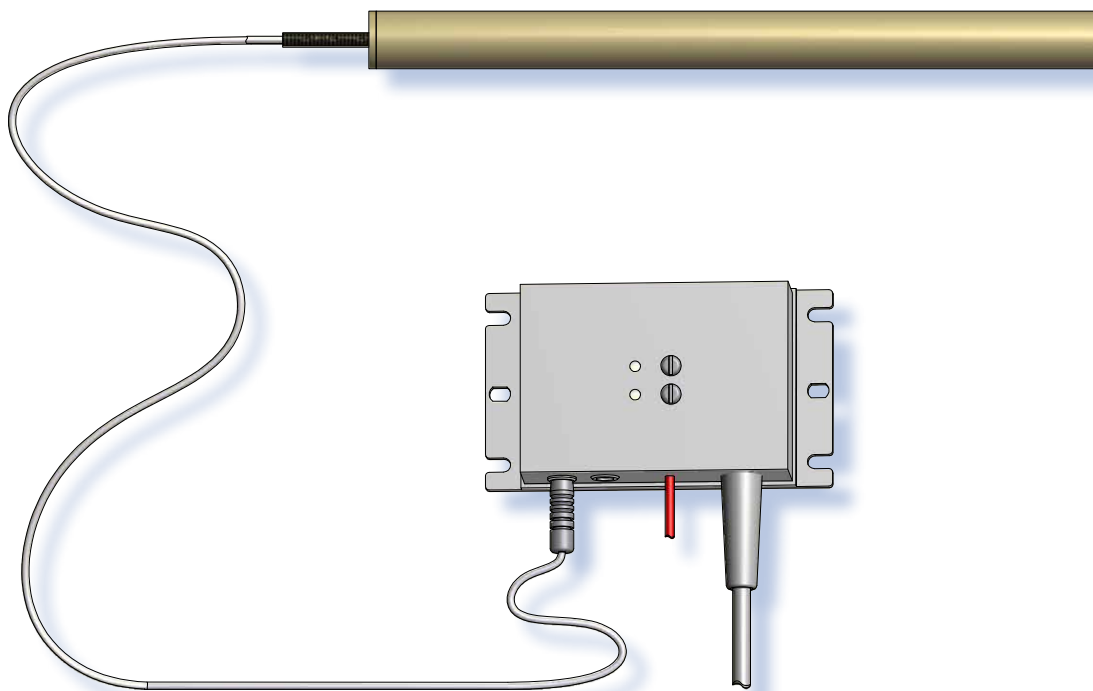






PERLeVeL Capacitive Level Probe + Evaluation Unit PNP output

- Capacitive level probe with 1 switching point
- Sensor and evaluation unit fix connected together. Cable length between sensor and evaluation unit 0,6 m.
- BE - cable length 0.2 m
- Particularly suitable for level control of strong adhesive products, like hot melt, glue etc.



Technical Data

Electrical version	4 wire DC
Output function	Antivalent
Type PNP	KFK-51-15-150-15-GFK-D16-X0E-L-P-A-Z0E
Art. No.	KFK 009
Operating voltage (U_B)	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V
Permitted residual ripple max.	25 %
Operating current (I_e)	0...250 mA
No-load current (I_o)	Typ. 75 mA
Frequency of operating cycles max.	4 Hz
Permitted ambient temperature (Evaluation unit)	-25...+55 °C
Permitted ambient temperature (Probe)	-70...+200 °C
LED-display	Green / yellow
Protective circuit	Built-in
Norm	EN 60947-5-2
Degree of protection IEC 60529 (Evaluation unit)	IP 54
Degree of protection IEC 60529 (Probe)	IP 67
Connection cable	0.30 m, PVC 4 x 0.34 mm ²
Housing material (Evaluation unit)	PA
Housing material (Probe)	GFK

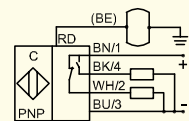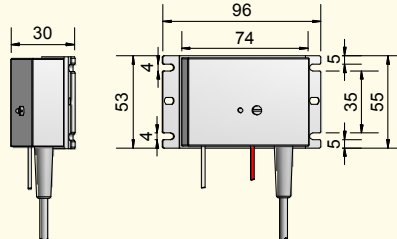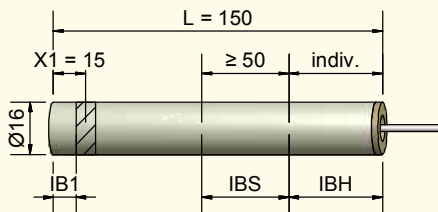






PER LeVeL® Capacitive Level Probe + Evaluation Unit PNP output

- Capacitive level probe with 1 switching point
- Sensor and evaluation unit fix connected together. Cable length between sensor and evaluation unit 0,7 m.
- BE - cable length 0.15 m
- Particularly suitable for level control of strong adhesive products, like hot melt, glue etc.



Technical Data

Electrical version	4 wire DC
Output function	Antivalent
Type PNP	KFK-51-15-300-15-GFK-D16-X0E-L-P-A-Z0E
Art. No.	KFK 025
Operating voltage (U_B)	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V
Permitted residual ripple max.	25 %
Operating current (I_a)	0...250 mA
No-load current (I_o)	Typ. 75 mA
Frequency of operating cycles max.	4 Hz
Permitted ambient temperature (Evaluation unit)	-25...+55 °C
Permitted ambient temperature (Probe)	-70...+200 °C
LED-display	Green / yellow
Protective circuit	Built-in
Norm	EN 60947-5-2
Degree of protection IEC 60529 (Evaluation unit)	IP 54
Degree of protection IEC 60529 (Probe)	IP 67
Connection cable	0.76 m, PVC 4 x 0.34 mm²
Housing material (Evaluation unit)	PA
Housing material (Probe)	GFK

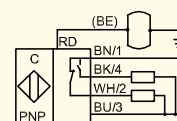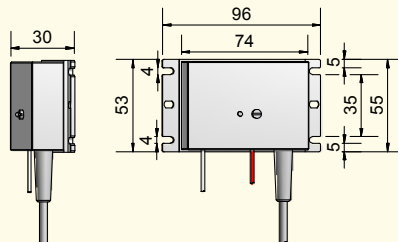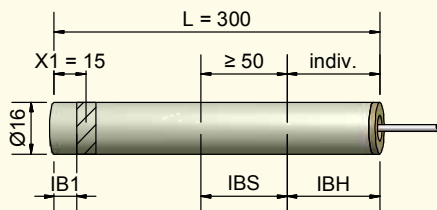






PERLeVeL Capacitive Level Probe + Evaluation Unit PNP output

- Capacitive level probe with 2 switching points
- Sensor and evaluation unit fix connected together. Cable length between sensor and evaluation unit 0.25 m.
- BE - cable length 0.15 m
- Particularly suitable for level control of strong adhesive products, like hot melt, glue etc.



Technical Data

Electrical version	4 wire DC
Output function	Normally open
Type PNP	KFK-52-15-150-40/65-PTFE-D16-X0E-L-P-S-Z0E
Art. No.	KFK 031
Operating voltage (U_B)	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V
Permitted residual ripple max.	25 %
Operating current (I_e)	2 x 0...250 mA
No-load current (I_o)	Typ. 75 mA
Frequency of operating cycles max.	4 Hz
Permitted ambient temperature (Evaluation unit)	-25...+55 °C
Permitted ambient temperature (Probe)	-70...+250 °C
LED-display	Green / yellow
Protective circuit	Built-in
Norm	EN 60947-5-2
Degree of protection IEC 60529 (Evaluation unit)	IP 54
Degree of protection IEC 60529 (Probe)	IP 67
Connection cable	Flange connector M 12 x 1 with 110 mm in cable length
Housing material (Evaluation unit)	PA
Housing material (Probe)	PTFE (FDA 21 CFR 177.1550)

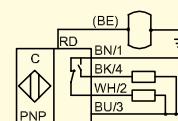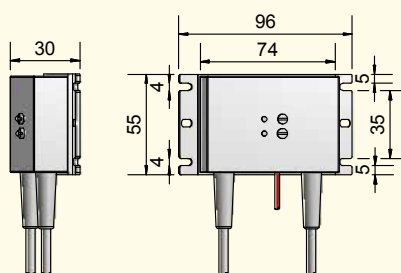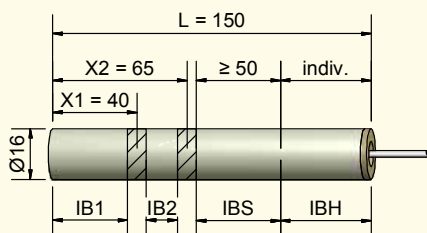

**CAPACITIVE, BINARY
LEVEL MEASUREMENT SYSTEM**

PER L&V&L®

Pages:

General description	78
Probes compact with 1 or 2 switching points KFX-5...	79 - 81
Probes compact with min/max control	82

Capacitive level measuring system for limit value measurement Compact design: KFX-5...

In this section we describe a Variant of the PerLevel Systems, where the evaluation unit is integrated in the connection head.

All characteristic features of the PerLevel Systems remain the same, as mentioned under general information.

A difference to the version with remote evaluation unit is the permitted ambient temperature. With the integrated evaluation unit in the connection head the permitted ambient temperature is lower. With integration of a temperature barrier and with use of a temperature buffer, this value can be increased.

Compact, space saving level measuring system.

Process connection G1"

Different process connection adapters are available, like Varivent DN 50, Triclamp, etc.

These systems are available with 1 or 2 switching points.





PER LeVeL Capacitive Filling Level Probe - KFX

NPN Output - Antivalent (NO + NC)

PNP Output - Antivalent (NO + NC)

1 Limit value switching point



- Integrated evaluation electronics
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. 2000 mm



Technical data

Active zones, related to probe tip	10...25 mm	10...25 mm
Electrical version	4 connections DC	4 connections DC
Output function	Antivalent	Antivalent
Type NPN	KFX-51-15-"L"-15-GFK/VAc-D16-PHG1-N-A-KL	KFX-51-15-"L"-15-PTFE/VAc-D16-PHG1-N-A-KL
Connection diagram No.	1	1
Type PNP	KFX-51-15-"L"-15-GFK/VAc-D16-PHG1-P-A-KL	KFX-51-15-"L"-15-PTFE/VAc-D16-PHG1-P-A-KL
Connection diagram No.	2	2
Operating voltage (U_B)	18...36 V DC	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V	≤ 2.5 V
Permitted residual ripple max.	25 %	25 %
Operating current (I_e)	2 x 0...250	2 x 0...250
No-load current (I_o)	Typ. 50 mA	Typ. 50 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+55 °C	-25...+55 °C
Permitted ambient temperature (for active zone)	-25...+100 °C	-25...+100 °C
Pressure	25 bar	2 bar
LED-Display	Green / yellow	Green / yellow
Protective circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection	Clamp terminal within the connection head	Clamp terminal within the connection head
Housing material	VA No. 1.4404 / AISI 316 L (FDA conform)	VA No. 1.4404 / AISI 316 L (FDA conform)
Active zone	GFK	PTFE (FDA 21 CFR 177.1550)

For matching accessories please see our selection of accessories.

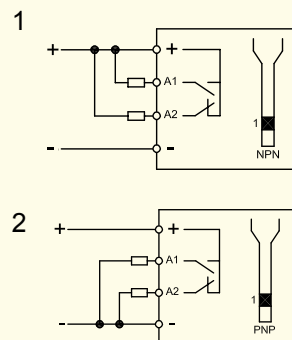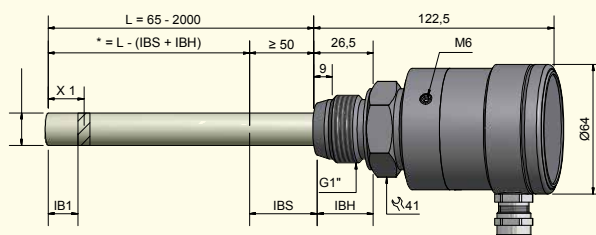

Please determine the total length „L“ when ordering.

Other housing materials for the active zone (probe), like PEEK, PVDF or PE on request.



PER LeVeL Capacitive Filling Level Probe - KFX

NPN Output - Normally Open (NO)

PNP Output - Normally Open (NO)

2 Limit value switching points



- Integrated evaluation electronics
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. 2000 mm



Technical data

Active zones, related to probe tip	10...25 mm + 1 x type specific X2	10...25 mm + 1 x type specific X2
Electrical version	4 connections DC	4 connections DC
Output function	Normally open	Normally open
Type NPN	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-S-KL	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-S-KL
Connection diagram No.	1	1
Type PNP	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-S-KL	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-S-KL
Connection diagram No.	2	2
Operating voltage (U _B)	18...36 V DC	18...36 V DC
Voltage drop max. (U _d)	≤ 2.5 V	≤ 2.5 V
Permitted residual ripple max.	25 %	25 %
Operating current (I _B)	2 x 0...250	2 x 0...250
No-load current (I ₀)	Typ. 50 mA	Typ. 50 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+55 °C	-25...+55 °C
Permitted ambient temperature (for active zone)	-25...+100 °C	-25...+100 °C
Pressure	25 bar	2 bar
LED-Display	Green / yellow	Green / yellow
Protective circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection	Clamp terminal within the connection head	Clamp terminal within the connection head
Housing material	VA No. 1.4404 / AISI 316 L (FDA conform)	VA No. 1.4404 / AISI 316 L (FDA conform)
Active zone	GFK	PTFE (FDA 21 CFR 177.1550)

For matching accessories please see our selection of accessories.

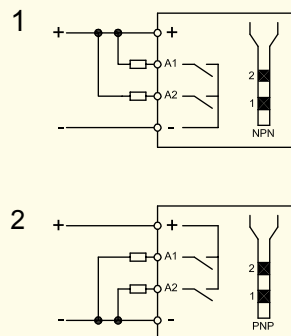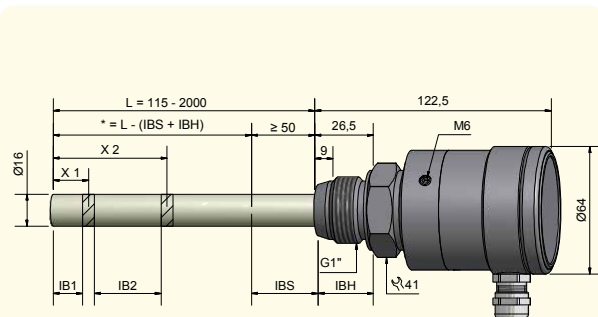

Please determine the total length „L“ and the position of the second switching point „X2“ when ordering.

Other housing materials for the active zone (probe), like PEEK, PVDF or PE on request.



PER LeVeL Capacitive Filling Level Probe - KFX

NPN Output - Normally Closed (NC)

PNP Output - Normally Closed (NC)

2 Limit value switching points



- Integrated evaluation electronics
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. 2000 mm



Technical data

Active zones, related to probe tip	10...25 mm + 1 x type specific X2	10...25 mm + 1 x type specific X2
Electrical version	4 connections DC	4 connections DC
Output function	Normally closed	Normally closed
Type NPN	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-Ö-KL	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-Ö-KL
Connection diagram No.	1	1
Type PNP	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-Ö-KL	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-Ö-KL
Connection diagram No.	2	2
Operating voltage (U_B)	18...36 V DC	18...36 V DC
Voltage drop max. (U_d)	≤ 2.5 V	≤ 2.5 V
Permitted residual ripple max.	25 %	25 %
Operating current (I_B)	2 x 0...250	2 x 0...250
No-load current (I_O)	Typ. 50 mA	Typ. 50 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+55 °C	-25...+55 °C
Permitted ambient temperature (for active zone)	-25...+100 °C	-25...+100 °C
Pressure	25 bar	2 bar
LED-Display	Green / yellow	Green / yellow
Protective circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection	Clamp terminal within the connection head	Clamp terminal within the connection head
Housing material	VA No. 1.4404 / AISI 316 L (FDA conform)	VA No. 1.4404 / AISI 316 L (FDA conform)
Active zone	GFK	PTFE (FDA 21 CFR 177.1550)

For matching accessories please see our selection of accessories.

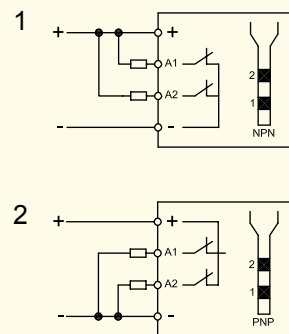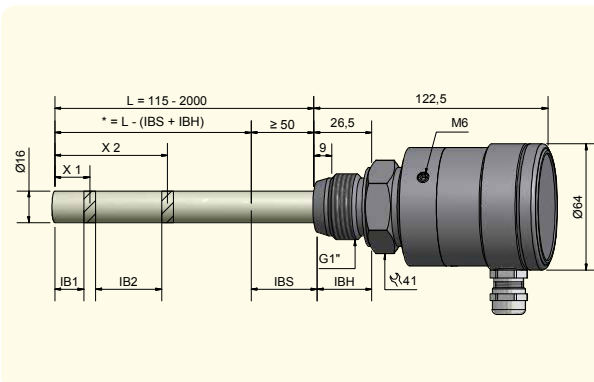

Please determine the total length „L“ and the position of the second switching point „X2“ when ordering.

Other housing materials for the active zone (probe), like PEEK, PVDF or PE on request.

Made in Germany



PER LeVeL Capacitive Filling Level Probe - KFX

NPN Output - Antivalent (NO + NC)

PNP Output - Antivalent (NO + NC)

2 Limit value switching points / MIN/MAX-Control



- Integrated evaluation electronics
- Housing material (active zone): See below, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G1"
- Probe length max. 2000 mm



Technical data

Active zones, related to probe tip	10...25 mm + 1 x type specific X2	10...25 mm + 1 x type specific X2
Electrical version	4 connections DC	4 connections DC
Output function	Antivalent	Antivalent
Type NPN	KFX-52-15-"L"-15/X2-GFK/VAC-D16-PHG1-N-A-KL-E	KFX-52-15-"L"-15/X2-PTFE/VAC-D16-PHG1-N-A-KL-E
Connection diagram No.	1	1
Type PNP	KFX-52-15-"L"-15/X2-GFK/VAC-D16-PHG1-P-A-KL-E	KFX-52-15-"L"-15/X2-PTFE/VAC-D16-PHG1-P-A-KL-E
Connection diagram No.	2	2
Operating voltage (U _B)	18...36 V DC	18...36 V DC
Voltage drop max. (U _d)	≤ 2.5 V	≤ 2.5 V
Permitted residual ripple max.	25 %	25 %
Operating current (I _B)	2 x 0...250	2 x 0...250
No-load current (I _O)	Typ. 50 mA	Typ. 50 mA
Switching frequency max.	4 Hz	4 Hz
Permitted ambient temperature	-25...+55 °C	-25...+55 °C
Permitted ambient temperature (for active zone)	-25...+100 °C	-25...+100 °C
Pressure	25 bar	2 bar
LED-Display	Green / yellow	Green / yellow
Protective circuit	Built-in	Built-in
Degree of protection IEC 60529	IP 67	IP 67
Norm	EN 60947-5-2	EN 60947-5-2
Connection	Clamp terminal within the connection head	Clamp terminal within the connection head
Housing material	VA No. 1.4404 / AISI 316 L (FDA conform)	VA No. 1.4404 / AISI 316 L (FDA conform)
Active zone	GFK	PTFE (FDA 21 CFR 177.1550)

For matching accessories please see our selection of accessories.

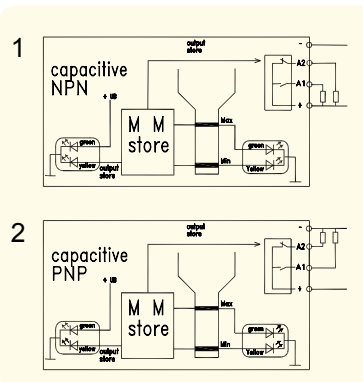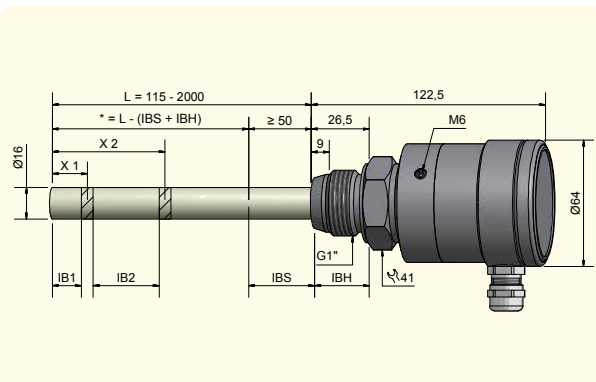

Please determine the total length „L“ and the position of the second switching point „X2“ when ordering.

Other housing materials for the active zone (probe), like PEEK, PVDF or PE on request.

Made in Germany

**CAPACITIVE, BINARY
LEVEL MEASUREMENT SYSTEM**

PER **LεVεL®**



Pages:

General Description	84
Probes with 1 or 2 switching points (KFS-5-...-STEX)	85 - 86
Probes compact with 1 or 2 switching points (KFX-5-...-STEX)	87 - 89

GENERAL DESCRIPTION - ATEX

PER **LeVEL**®

This capacitive measurement is based on the generation of an electric field between Container and probe. Herewith a "measuring capacitor" is formed. Within this measuring capacitor the filling material works as a dielectric that changes its capacity. These capacity changes are electronically evaluated and are converted into the desired output signals.

Basic configuration of the Limit Value Measuring System

- **System with separate Evaluation Unit**
Probe + Connection cable + Electronic Evaluation Unit
- **Probe with evaluation electronics integrated in the connection head**

System with separate Evaluation Unit:

Probe

The probe is a passive component. With the ATEX certified version the housing material of the probe must be PTFE and stainless steel for the connection head. The connection head provides a 1" process connection.

Electronic Evaluation Unit

The Electronic Evaluation Unit is separate and must be installed outside of the area with risk of explosion.


Compact version

Probe with evaluation unit integrated in the connection head for 1 or 2 measuring points



Schematic illustration of how to mount the system:

Explanation of the capacitive level measuring systems for dust Ex zones 20, 21 and 22

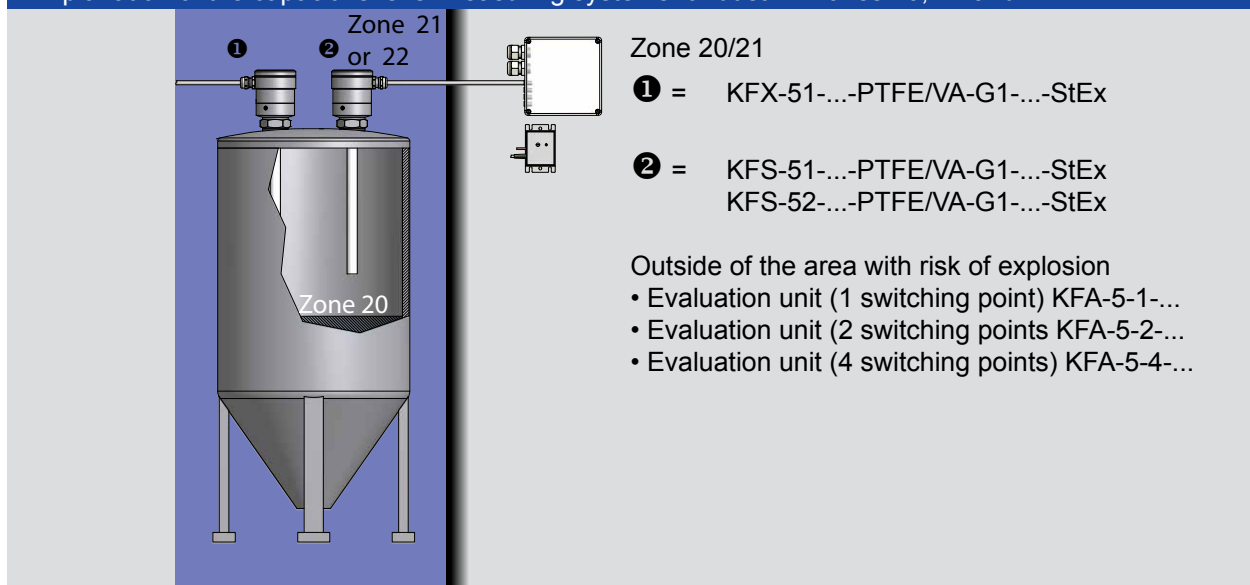



PER LeVeL Capacitive Filling Level Probe - KFS - ATEX 1 Limit value switching point

- For connection to the capacitive amplifier KFA-5-...
- For use in areas with the risk of dust explosion, zone 20
- For use in areas with the risk of gas explosion, zone 1
- Housing material (active zone): PTFE, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm

BVS 05 ATEX E 185	IECEX BVS 07.0032
II 2G Ex mb II T4	Ex mb II T4
II 1/2 D IP 67 T 110°C	Ex tD A20/21 IP 67 T 110°C



Technical data

Active zone 10...25 mm, related to the probe tip

Type **KFS-5-1-"L"-15-PTFE/VA-1"-StEx**

Permitted ambient temperature -20...+100 °C

Permitted ambient temperature (active zone) -20...+100 °C

Degree of protection IEC 60529 IP 67*

Norm EN 60947-5-2

Connection to the evaluation unit KFA-5-... Sockets within the connection head

Housing material VA No. 1.4404 / AISI 316 L (FDA conform)

Housing material (active zone) PTFE (FDA 21 CFR 177.1550)


Accessories:

For evaluation unit KFA-5-...-Y50: Plug connection Y75 / Y55, 2 m cable length, # 66101213, is not delivered with the probe


For evaluation unit KFA-5-...-Y70: Plug connection Y75 / Y75, 2 m cable length, # 66101203, is not delivered with the probe

For matching accessories please see our selection of accessories.

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

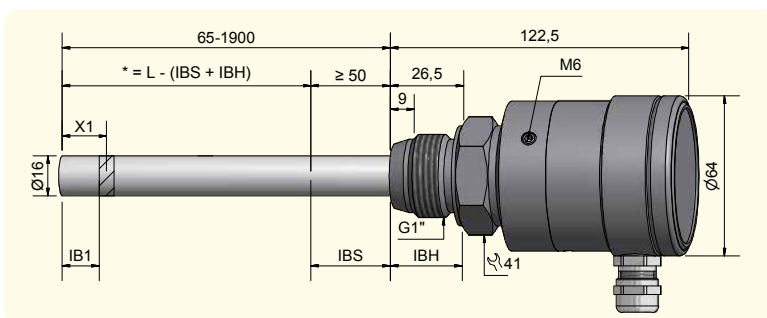

Connection socket within connection head

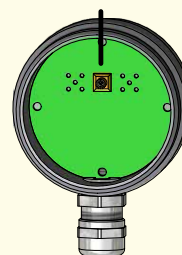

Please determine the total length „L“ when ordering.



PERLeVeL Capacitive Filling Level Probe - KFS - ATEX 2 Limit value switching points

- For connection to the capacitive amplifier KFA-5-...
- For use in areas with the risk of dust explosion, zone 20
- For use in areas with the risk of gas explosion, zone 1
- Housing material (active zone): PTFE, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm


BVS 05 ATEX E 185	IECEX BVS 07.0032
II 2G Ex mb II T4	Ex mb II T4
II 1/2 D IP 67 T 110°C	Ex tD A20/21 IP 67 T 110°C




Technical data

Active zone	10...25 mm, related to the probe tip + 1 x type specific X2
Type	KFS-5-2-"L"-15/X2-PTFE/VA-1"-StEx
Permitted ambient temperature	-20...+100 °C
Permitted ambient temperature (active zone)	-20...+100 °C
Degree of protection IEC 60529	IP 67*
Norm	EN 60947-5-2
Connection to the evaluation unit KFA-5-...	Sockets within the connection head
Housing material	VA No. 1.4404 / AISI 316 L (FDA conform)
Housing material (active zone)	PTFE (FDA 21 CFR 177.1550)
Accessories:	
For evaluation unit KFA-5-...-Y50:	Plug connection Y75 / Y55, 2 m cable length, # 66101242, is not delivered with the probe
For evaluation unit KFA-5-...-Y70:	Plug connection Y75 / Y75, 2 m cable length, # 66101204, is not delivered with the probe
For matching accessories please see our selection of accessories.	

* The degree of protection may be increased by means of special measures at mounting (e. g. injection of silicone mixture).

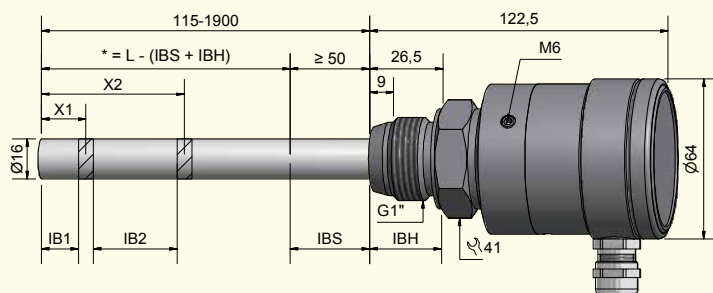

Connection sockets within connection head

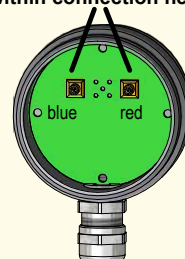

Please determine the total length „L“ and the position of the second switching point “X2” when ordering.



PER LeVeL Capacitive Filling Level Probe - KFX - ATEX
NPN Output - Antivalent (NO + NC)
PNP Output - Antivalent (NO + NC)
1 Limit value switching point



- Integrated evaluation electronics
- For use in areas with the risk of dust explosion, zone 20
- For use in areas with the risk of gas explosion, zone 1
- Housing material (active zone): PTFE, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm

BVS 05 ATEX E 185	IECEx BVS 07.0032
Ex II 2G Ex mb II T4	Ex mb II T4
Ex II 1/2 D IP 67 T 110°C	Ex tD A20/21 IP 67 T 110°C



Technical data

Active zone, related to probe tip	10...25 mm
Electrical version	4 connections DC
Output function	Antivalent
Type	KFX-5-1-"L"-15-N-A-PTFE/VA-1"-StEx
Connection diagram No.	1
Type	KFX-5-1-"L"-15-P-A-PTFE/VA-1"-StEx
Connection diagram No.	2
Operating voltage (U_B)	18...30 V DC
Voltage drop max. (U_d)	≤ 2,5 V
Permitted residual ripple max.	25 %
No-load current (I_o)	Typ. 50 mA
Switching frequency max.	4 Hz
Operating current (I_e)	2 x 0...100 mA
Permitted ambient temperature	-20...+55 °C
Permitted ambient temperature (for active zone)	-20...+100 °C
LED-display	Green / yellow
Protective circuit	Build-in
Degree of protection IEC 60529	IP 67
Norm	EN 60947-5-2
Connection cable	10 m, PVC, 4 x 0.5 mm ²
Housing material	VA No. 1.4404
Housing material (active zone)	PTFE (FDA 21 CFR 177.1550)
For matching accessories please see our selection of accessories.	

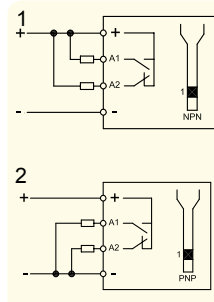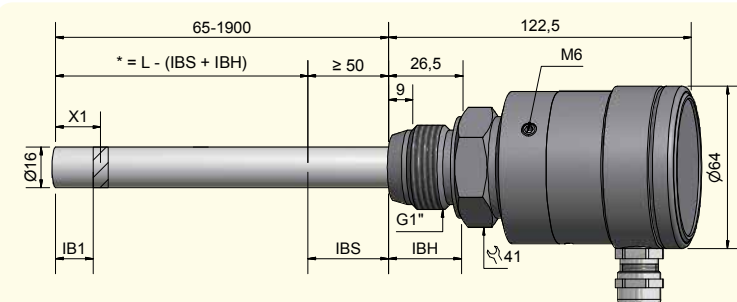

Please determine the total length „L“ when ordering.



PER Level Capacitive Filling Level Probe - KFX - ATEX
NPN Output - Normally Closed (NC)
PNP Output - Normally Closed (NC)
2 Limit value switching points



- Integrated evaluation electronics
- For use in areas with the risk of dust explosion, zone 20
- For use in areas with the risk of gas explosion, zone 1
- Housing material (active zone): PTFE, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm

BVS 05 ATEX E 185	IECEX BVS 07.0032
Ex II 2G Ex mb II T4	Ex mb II T4
Ex II 1/2 D IP 67 T 110°C	Ex tD A20/21 IP 67 T 110°C



Technical data

Active zone, related to probe tip	10...25 mm, + 1 x type specific X2
Electrical version	4 connections DC
Output function	Normally closed
Type	KFX-5-2-"L"-15/X2-N-Ö-PTFE/VA-1"-StEx
Connection diagram No.	1
Type	KFX-5-2-"L"-15/X2-P-Ö-PTFE/VA-1"-StEx
Connection diagram No.	2
Operating voltage (U _B)	18...30 V DC
Voltage drop max. (U _d)	≤ 2,5 V
Permitted residual ripple max.	25 %
Operating current (I _a)	2 x 0...100 mA
No-load current (I _o)	Typ. 50 mA
Switching frequency max.	4 Hz
Permitted ambient temperature	-20...+55 °C
Permitted ambient temperature (for active zone)	-20...+100 °C
LED-display	Green / yellow
Protective circuit	Build-in
Degree of protection IEC 60529	IP 67
Norm	EN 60947-5-2
Connection cable	10 m, PVC, 4 x 0.5 mm ²
Housing material	VA No. 1.4404
Housing material (active zone)	PTFE (FDA 21 CFR 177.1550)
For matching accessories please see our selection of accessories.	

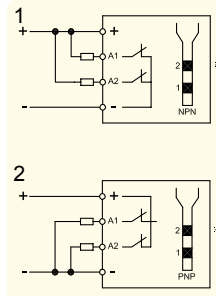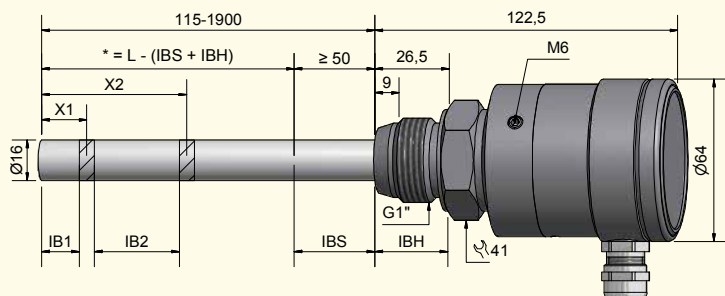

Please determine the total length „L“ and the position of the second switching point „X2“ when ordering.



PER LeVeL Capacitive Filling Level Probe - KFX - ATEX

NPN Output - Normally Open (NO)

PNP Output - Normally Open (NO)

2 Limit value switching points

- Integrated evaluation electronics
- For use in areas with the risk of dust explosion, zone 20
- For use in areas with the risk of gas explosion, zone 1
- Housing material (active zone): PTFE, Ø 16 mm
- Connection head and process connection stainless steel VA
- Process connection G 1"
- Probe length max. 1900 mm

BVS 05 ATEX E 185

IECEx BVS 07.0032

II 2G Ex mb II T4

Ex mb II T4

II 1/2 D IP 67 T 110°C

Ex tD A20/21 IP 67 T 110°C



Technical data

Active zone, related to probe tip 10...25 mm + 1 x type specific X2

Electrical version 4 connections DC

Output function Normally open

Type KFX-5-2-"L"-15/X2-N-S-PTFE/VA-1"-StEx

Connection diagram No. 1

Type KFX-5-2-"L"-15/X2-P-S-PTFE/VA-1"-StEx

Connection diagram No. 2

Operating voltage (U_B) 18...30 V DC

Voltage drop max. (U_d) ≤ 2,5 V

Permitted residual ripple max. 25 %

Operating current (I_e) 2 x 0...100 mA

No-load current (I_o) Typ. 50 mA

Switching frequency max. 4 Hz

Permitted ambient temperature -20...+55 °C

Permitted ambient temperature (for active zone) -20...+100 °C

LED-display Green / yellow

Protective circuit Build-in

Degree of protection IEC 60529 IP 67



Norm EN 60947-5-2

Connection cable 10 m, PVC, 4 x 0.5 mm²

Housing material VA No. 1.4404

Housing material (active zone) PTFE (FDA 21 CFR 177.1550)

For matching accessories please see our selection of accessories.

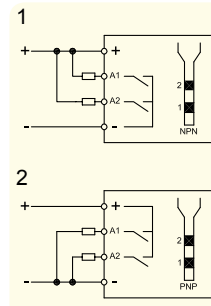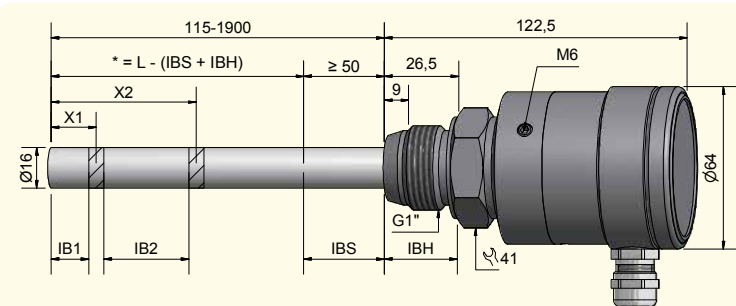

Please determine the total length "L" and the position of the second switching point "X2" when ordering.

Made in Germany

ACCESSORIES

Pages:

Probe holder	92 - 97
Squeeze clamps	98 - 99
Varivent	100
Triclamp adapter	101 - 102
Connection cable with connectors	103



Squeeze clamps for capacitive filling level systems with 16 mm in diameter


Process connection: PG16

- Mounting device for probes (Ø 16mm) without connection head
- Housing material: Brass
- With NBR O-rings



Technical Data

Process connection	PG16
Applicable for capacitive level probes with diameter	16 mm
Type	A-KLV-D16-PG16-MS/NBR
Art. No.	194 000
Housing material	Brass
Surface quality Ra, part in contact with the medium	0,4 µm
Accessories (delivered with the unit)	1 nut

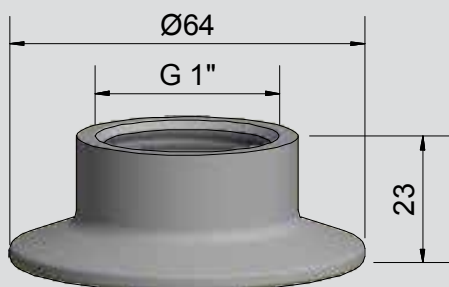



**Squeeze clamps
for capacitive filling level systems with 16 mm in diameter**


Process connection: PG16

- Mounting device for probes (Ø 16mm) without connection head
- Housing material: Brass
- With Viton O-ring
- Useable for an ambient temperature up to +200 °C



Technical Data

Process connection	PG16
Applicable for capacitive level probes with diameter:	16 mm
Type	A-KLV-D16-PG16-MS/Viton
Art. No.	194 001
Housing material	Brass
Surface quality Ra, part in contact with the medium	0,4 µm
Accessories (delivered with the unit)	1 nut

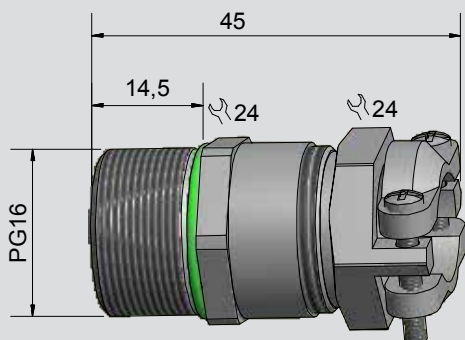



Squeeze clamps for capacitive filling level systems with 16 mm in diameter


Process connection: G 1"

- Mounting device for probes (Ø 16mm) without connection head
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- With PTFE O-rings
- Thanks to the PTFE O-rings the squeeze clamp can be opened and closed if necessary.



Technical Data

Process connection	G 1"
Applicable for capacitive level probes with diameter:	16 mm
Type	A-KLV-D16-G1-VAc/PTFE
Art. No.	194 011
Housing material	VA, No. 1.4404 / AISI 316L, FDA-conforming
Surface quality Ra, part in contact with the medium	0,4 µm
Accessories (delivered with the unit)	2 PTFE O-rings

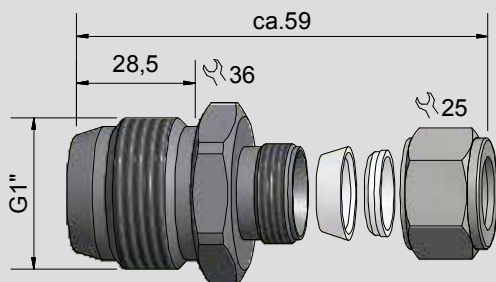



Squeeze clamps for capacitive filling level systems with 16 mm in diameter


Process connection: G 1"

- Mounting device for probes (Ø 16mm) without connection head
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- With stainless steel O-rings
- When the squeeze clamp has been locked for the first time, the stainless steel O-rings are bonded with the body of the level probe and they cannot be removed to another position.



Technical Data

Process connection	G 1"
Applicable for capacitive level probes with diameter:	16 mm
Type	A-KLV-D16-G1-VAc/VAc
Art. No.	194 012
Housing material	VA, No. 1.4404 / AISI 316L, FDA-conforming
Surface quality Ra, part in contact with the medium	0,4 µm
Accessories (delivered with the unit)	2 stainless steel O-rings

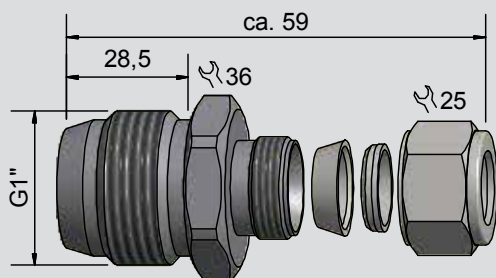



Squeeze clamps for capacitive filling level systems with 16 mm in diameter


Process connection: G 3/4"

- Mounting device for probes (Ø 16mm) without connection head
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- With PTFE O-rings
- Thanks to the PTFE O-rings the squeeze clamp can be opened and closed if necessary.



Technical Data

Process connection	G 3/4"
Applicable for capacitive level probes with diameter:	16 mm
Type	A-KLV-D16-G3/4-VAc/PTFE
Art. No.	194 201
Housing material	VA, No. 1.4404 / AISI 316L, FDA-conforming
Surface quality Ra, part in contact with the medium	0,4 µm
Accessories (delivered with the unit)	2 PTFE O-rings

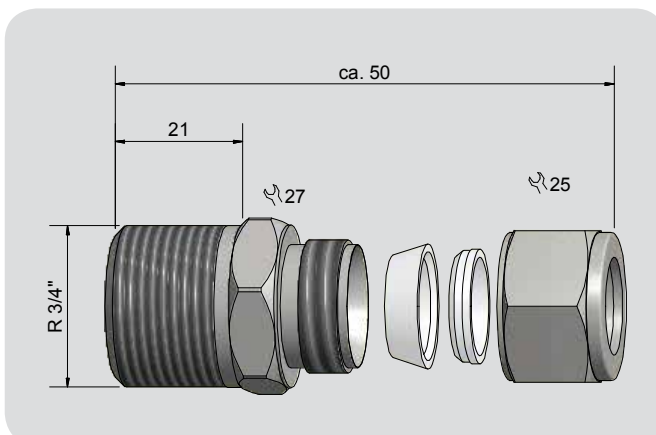



Squeeze clamps for capacitive filling level systems with 16 mm in diameter


Process connection: G 3/4"

- Mounting device for probes (Ø 16mm) without connection head
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- With stainless steel O-rings
- When the squeeze clamp has been locked for the first time, the stainless steel O-rings are bonded with the body of the level probe and they cannot be removed to another position.



Technical Data

Process connection	G 3/4"
Applicable for capacitive level probes with diameter:	16 mm
Type	A-KLV-D16-G3/4-VAc/VAc
Art. No.	194 202
Housing material	VA, No. 1.4404 / AISI 316L, FDA-conforming
Surface quality Ra, part in contact with the medium	0,4 µm
Accessories (delivered with the unit)	2 stainless steel O-rings

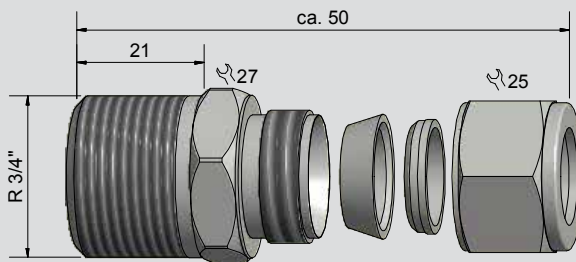




Spherical welding socket

- For containers and pipes
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- Suitable for our probes with a process connection G 1"



Technical Data

Type	A-ESM-G1-D55-VAc
Art. No.	196 368
Housing material	VA, No. 1.4404 / AISI 316L
Surface quality Ra, part in contact with the medium	0,4 µm

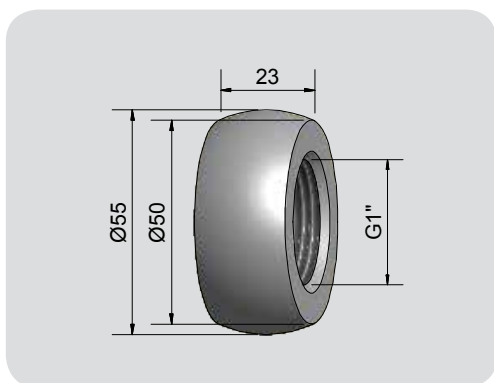




Cylindrical welding socket

- For containers and pipes
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- Suitable for our probes with a process connection G 1"



Technical Data

Type	A-ESM-G1-D50-VAc
Art. No.	196 369
Housing material	VA, No. 1.4404 / AISI 316L
Surface quality Ra, part in contact with the medium	0,4 µm

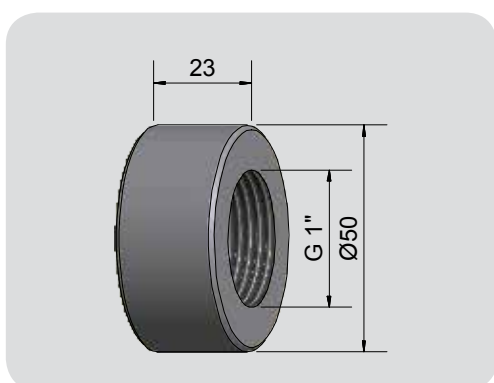




Varivent N

- Model: Varivent N DN50
- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- Suitable for our probes with a process connection G 1"



Technical Data

Type	A-VAR-G1-D84-VAc
Art. No.	196 377
Housing material	VA, No. 1.4404 / AISI 316L
Surface quality Ra, part in contact with the medium	0,4 µm

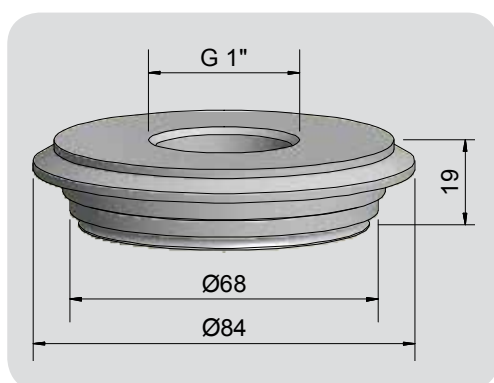




Triclamp

- Housing: Stainless steel VA No. 1.4404 / AISI 316L
- Suitable for our probes with a process connection G 1"



Technical Data

Type	A-Tri-G1-D64-VAc
Art. No.	196 379
Housing material	VA, No. 1.4404 / AISI 316L
Surface quality Ra, part in contact with the medium	0,4 µm

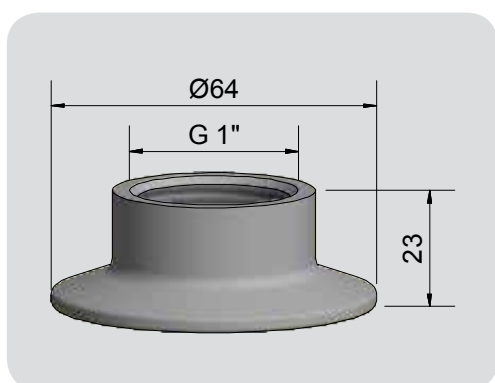




Triclamp

- Housing material: Stainless steel VA No. 1.4404 / AISI 316L
- Suitable for our probes with a process connection G 1"



Technical Data

Type	A-Tri-G1-D50-VAc
Art. No.	196 396
Housing material	VA, No. 1.4404 / AISI 316L
Surface quality Ra, part in contact with the medium	0,4 µm

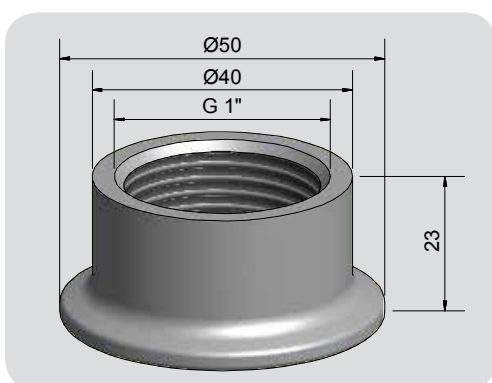

CONNECTION CABLE WITH CONNECTORS



Technical data	TRUE LeVEL [®]	TRUE LeVEL [®]
Type	S-Y75/Y75-1-2-Z02	S-Y75/Y75-1-2-Z05
Art.-No.	66101201	66101202
Cable length	2 m	5 m
Plug connection	Y75 / Y75	Y75 / Y75
For measurement system	KFS-1-...-Y70	KFS-1-...-Y70



Technical data	PER LeVEL [®]
Type	S-Y75/Y55-1-1-Z02
Art.-No.	66101213
Cable length	2 m
Plug connection	Y75 / Y55
For measurement system	KFS-5-...-Y70 / KFA-5-...-Y50



Technical data	PER LeVEL [®]
Type	S-Y75/Y75-1-1-Z02
Art.-No.	66101203
Cable length	2 m
Plug connection	Y75 / Y75
For measurement system	KFS-5-...-Y70 / KFA-5-...-Y70



Technical data	PER LeVEL [®]
Type	S-Y75/Y55-1-2-Z02
Art.-No.	66101242
Cable length	2 m
Plug connection	Y75 / Y55
For measurement system	KFS-5-...-Y70 / KFA-5-...-Y50



Technical data	PER LeVEL [®]
Type	S-Y75/Y75-1-2-Z02
Art.-No.	66101204
Cable length	2 m
Plug connection	Y75 / Y75
For measurement system	KFS-5-...-Y70 / KFA-5-...-Y70



Technical data	PER LeVEL [®]
Type	S-Y75/Y75-1-3-Z02
Art.-No.	66101205
Cable length	2 m
Plug connection	Y75 / Y75
For measurement system	KFS-53-...-Y70 / KFA-5-4-...-Y70

TYPE SELECTION IN ARTICLE NUMBER ORDER

Type	Art.-No.	Page	Type	Art.-No.	Page
Y75 / Y75 KFS-1-... 2m	66101201	103	KFS-51-15-300-15-GFK-D16-X0E-L-P-A-Z0E	KFK 025	74
Y75 / Y75 KFS-1-... 5m	66101202	103	KFS-52-15-150-40/65-PTFE-D16-X0E-L-P-S-Z0E	KFK 031	75
Y75 / Y75 KFS-5-2(4)-...	66101203	103	KFS-1-85-"L"-M"-GFKD16-X02-Y75		26
Y75 / Y75 KFS-5-2(4)-... 2m	66101204	103	KFS-1-85-"L"-M"-PTFED16-X02-Y75		26
Y75 / Y75KFS-5-4-... 2m	66101205	103	KFS-1-85-"L"-M"-PEEKD16-X02-Y75		26
Y75 / Y55 KFS-5-1-... 2m	66101213	103	KFS-1-85-"L"-M"-GFK/VAc-D16-PHG1-X00-Y70		27
Y75 / Y55 KFS-5-2-... 2m	66101242	103	KFS-1-85-"L"-M"-PTFE/VAc-D16-PHG1-X00-Y70		27
A-KLV-D16-PG16-MS/NBR	194 000	92	KFS-1-"L"-M"-PTFE/VA-1"-StEx		35
A-KLV-D16-PG16-MS/Viton	194 001	93	KFS-51-15-"L"-15-GFK-D16-X02-Y55		44
A-KLV-D16-G1-VAc/PTFE	194 011	94	KFS-51-15-"L"-15-GFK-D16-X02-Y75		44
A-KLV-D16-G1-VAc/VAc	194 012	95	KFS-51-15-"L"-15-GFK-D16-X02-Y76		44
A-KLV-D16-G3/4-VAc/PTFE	194 201	96	KFS-51-15-"L"-15-GFK-D16-X02-Y95		44
A-KLV-D16-G3/4-VAc/VAc	194 202	97	KFS-51-15-"L"-15-PTFE-D16-X02-Y55		44
A-ESM-G1-D55-VAc	196 368	98	KFS-51-15-"L"-15-PTFE-D16-X02-Y75		44
A-ESM-G1-D50-VAc	196 369	99	KFS-51-15-"L"-15-PTFE-D16-X02-Y76		44
A-VAR-G1-D84-VAc	196 377	100	KFS-51-15-"L"-15-PTFE-D16-X02-Y95		44
A-Tri-G1-D64-VAc	196 379	101	KFS-52-15-"L"-15/X2-GFK-D16-X02-Y55		45
A-Tri-G1-D50-VAc	196 396	102	KFS-52-15-"L"-15/X2-GFK-D16-X02-Y75		45
KFA-5-1-XXL-I-FB-KL-PG9	972 210	69	KFS-52-15-"L"-15/X2-GFK-D16-X02-Y76		45
KFA-5-1-B-N-P-Z02-Y50	AF 0004	60	KFS-52-15-"L"-15/X2-GFK-D16-X02-Y95		45
KFA-5-1-B-N-A-Z02-Y50	AF 0005	60	KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y55		45
KFA-5-4-XXL-P-S-4FB-CC-Y50	AF 0046	66	KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y75		45
KFA-5-2-XXL-II-KL-PG9	AF 0049	70	KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y76		45
KFA-5-2-L-P-Ö-Z02-Y50	AF 0062	62	KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y95		45
KFA-5-4-XXL-P-A-CC-Y50	AF 0063	65	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y55		46
KFA-5-1-L-P-A-Z02-Y50	AF 0064	61	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y75		46
KFA-5-2-L-P-S-Z02-Y50	AF 0065	62	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y76		46
KFA-5-2-L-N-S-Z02-Y50	AF 0066	62	KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y95		46
KFA-5-2-L-N-Ö-Z02-Y50	AF 0067	62	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y55		46
KFA-5-1-L-N-A-Z02-Y50	AF 0068	61	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y75		46
KFA-5-4-XXL-P-A-CC-Y70	AF 0080	67	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y76		46
KFA-5-4-XXL-N-A-CC-Y50	AF 0086	65	KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y95		46
KFA-5-4-XXL-P-Ö-4FB-CC-Y50	AF 0089	66	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y55		47
KFA-5-4-XXL-N-Ö-4FB-CC-Y50	AF 0090	66	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y75		47
KFA-5-4-XXL-N-S-4FB-CC-Y50	AF 0091	66	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y76		47
KFA-5-4-XXL-N-A-CC-Y70	AF 0096	67	KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y95		47
KFA-5-4-XXL-N-S-4FB-CC-Y70	AF 0097	68	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y55		47
KFA-5-4-XXL-N-Ö-4FB-CC-Y70	AF 0098	68	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y75		47
KFA-5-4-XXL-P-S-4FB-CC-Y70	AF 0099	68	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y76		47
KFA-5-4-XXL-P-Ö-4FB-CC-Y70	AF 0100	68	KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y95		47
KFA-5-1-XL-I-CC-Y50	AF 0101	63	KFS-51-15-"L"-15-GFK/VAc-D16-PHG1-X00-Y70		48
KFA-5-2-XL-II-CC-Y50	AF 0102	64	KFS-51-15-"L"-15-PTFE/VAc-D16-PHG1-X00-Y70		48
KFA-1-200-XXL-FL-Y70	AF 0125	30	KFS-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-X00-Y70		49
KFA-1-500-XXL-FL-Y70	AF 0126	30	KFS-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-X00-Y70		49
KFA-1-1000-XXL-FL-Y70	AF 0127	30	KFS-53-15-"L"-15/X2/X3-GFK/VAc-D16-PHG1-X00-Y70		50
KFA-1-2000-XXL-FL-Y70	AF 0128	30	KFS-53-15-"L"-15/X2/X3-PTFE/VAc-D16-PHG1-X00-Y70		50
KFA-1-200-XXL-IL-4-Y70	AF 0129	31	KFX-51-15-"L"-15-GFK/VAc-D16-PHG1-N-A-KL		79
KFA-1-500-XXL-IL-4-Y70	AF 0130	31	KFX-51-15-"L"-15-GFK/VAc-D16-PHG1-P-A-KL		79
KFA-1-1000-XXL-IL-4-Y70	AF 0131	31	KFX-51-15-"L"-15-PTFE/VAc-D16-PHG1-N-A-KL		79
KFA-1-2000-XXL-IL-4-Y70	AF 0132	31	KFX-51-15-"L"-15-PTFE/VAc-D16-PHG1-P-A-KL		79
KFA-1-200-XXL-IL-0-Y70	AF 0133	32	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-S-KL		80
KFA-1-500-XXL-IL-0-Y70	AF 0134	32	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-S-KL		80
KFA-1-1000-XXL-IL-0-Y70	AF 0135	32	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-S-KL		80
KFA-1-2000-XXL-IL-0-Y70	AF 0136	32	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-S-KL		80
KFS-51-15-60-15-PEEK-D10-X02-Y75	KF 0277	53	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-Ö-KL		81
KFS-51-15-60-15-PEEK-D10-M12-X0E-Y55	KF 0284	54	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-Ö-KL		81
KFS-51-15-200-15-GFK-D10-X02-Y75	KF 0285	55	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-Ö-KL		81
KFS-51-15-100-15-PEEK-D10-X02-Y55	KF 0304	56	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-Ö-KL		81
KFS-51-5-54-15-GFK/AL-D16-W-X02-Y55	KF 0314	57	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-A-KL		82
KFS-51-15-60-15-PEEK-D10-X01-Y55	KF 0331	53	KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-A-KL		82
KFS-51-15-150-15-GFK-D16-X0E-L-P-A-Z0E	KFK 009	73	KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-A-KL		82

TYPE SELECTION IN ARTICLE NUMBER ORDER

Type	Art.-No.	Page
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-A-KL		82
KFS-5-1-"L"-15-PTFE/VA-1"-StEx		85
KFS-5-2-"L"-15/X2-PTFE/VA-1"-StEx		86
KFX-5-1-"L"-15-N-A-PTFE/VA-1"-StEx		87
KFX-5-1-"L"-15-P-A-PTFE/VA-1"-StEx		87
KFX-5-2-"L"-15/X2-N-Ö-PTFE/VA-1"-StEx		88
KFX-5-2-"L"-15/X2-P-Ö-PTFE/VA-1"-StEx		88
KFX-5-2-"L"-15/X2-N-S-PTFE/VA-1"-StEx		89
KFX-5-2-"L"-15/X2-P-S-PTFE/VA-1"-StEx		89

TYPE SELECTION IN DESCRIPTION ORDER

Type	Art.-No.	Page
A-ESM-G1-D50-VAc	196 369	99
A-ESM-G1-D55-VAc	196 368	98
A-KLV-D16-G1-VAc/PTFE	194 011	94
A-KLV-D16-G1-VAc/VAc	194 012	95
A-KLV-D16-G3/4-VAc/PTFE	194 201	96
A-KLV-D16-G3/4-VAc/VAc	194 202	97
A-KLV-D16-PG16-MS/NBR	194 000	92
A-KLV-D16-PG16-MS/Viton	194 001	93
A-Tri-G1-D50-VAc	196 396	102
A-Tri-G1-D64-VAc	196 379	101
A-VAR-G1-D84-VAc	196 377	100
KFA-1-1000-XXL-FL-Y70	AF 0127	30
KFA-1-1000-XXL-IL-0-Y70	AF 0135	32
KFA-1-1000-XXL-IL-4-Y70	AF 0131	31
KFA-1-2000-XXL-FL-Y70	AF 0128	30
KFA-1-2000-XXL-IL-0-Y70	AF 0136	32
KFA-1-2000-XXL-IL-4-Y70	AF 0132	31
KFA-1-200-XXL-FL-Y70	AF 0125	30
KFA-1-200-XXL-IL-0-Y70	AF 0133	32
KFA-1-200-XXL-IL-4-Y70	AF 0129	31
KFA-1-500-XXL-FL-Y70	AF 0126	30
KFA-1-500-XXL-IL-0-Y70	AF 0134	32
KFA-1-500-XXL-IL-4-Y70	AF 0130	31
KFA-5-1-B-N-A-Z02-Y50	AF 0005	60
KFA-5-1-B-N-P-Z02-Y50	AF 0004	60
KFA-5-1-L-N-A-Z02-Y50	AF 0068	61
KFA-5-1-L-P-A-Z02-Y50	AF 0064	61
KFA-5-1-XL-I-CC-Y50	AF 0101	63
KFA-5-1-XXL-I-FB-KL-PG9	972 210	69
KFA-5-2-L-N-Ö-Z02-Y50	AF 0067	62
KFA-5-2-L-N-S-Z02-Y50	AF 0066	62
KFA-5-2-L-P-Ö-Z02-Y50	AF 0062	62
KFA-5-2-L-P-S-Z02-Y50	AF 0065	62
KFA-5-2-XL-II-CC-Y50	AF 0102	64
KFA-5-2-XL-II-CC-Y50	AF 0102	64
KFA-5-2-XXL-II-KL-PG9	AF 0049	70
KFA-5-2-XXL-II-KL-PG9	AF 0049	70
KFA-5-4-XXL-N-A-CC-Y50	AF 0086	65
KFA-5-4-XXL-N-A-CC-Y70	AF 0096	67
KFA-5-4-XXL-N-Ö-4FB-CC-Y50	AF 0090	66
KFA-5-4-XXL-N-Ö-4FB-CC-Y70	AF 0098	68
KFA-5-4-XXL-N-S-4FB-CC-Y50	AF 0091	66
KFA-5-4-XXL-N-S-4FB-CC-Y70	AF 0097	68
KFA-5-4-XXL-P-A-CC-Y50	AF 0063	65
KFA-5-4-XXL-P-A-CC-Y70	AF 0080	67

Type	Art.-No.	Page
KFA-5-4-XXL-P-Ö-4FB-CC-Y50	AF 0089	66
KFA-5-4-XXL-P-Ö-4FB-CC-Y70	AF 0100	68
KFA-5-4-XXL-P-S-4FB-CC-Y50	AF 0046	66
KFA-5-4-XXL-P-S-4FB-CC-Y70	AF 0099	68
KFS-1-"L"-M"-PTFE/VA-1"-StEx		35
KFS-1-85-"L"-M"-GFK/VAc-D16-PHG1-X00-Y70		27
KFS-1-85-"L"-M"-GFKD16-X02-Y75		26
KFS-1-85-"L"-M"-PEEKD16-X02-Y75		26
KFS-1-85-"L"-M"-PTFE/VAc-D16-PHG1-X00-Y70		27
KFS-1-85-"L"-M"-PTFED16-X02-Y75		26
KFS-5-1-"L"-15-PTFE/VA-1"-StEx		85
KFS-51-15-"L"-15-GFK/VAc-D16-PHG1-X00-Y70		48
KFS-51-15-"L"-15-PTFE/VAc-D16-PHG1-X00-Y70		48
KFS-51-15-"L"-15-GFK-D16-X02-Y55		44
KFS-51-15-"L"-15-GFK-D16-X02-Y75		44
KFS-51-15-"L"-15-GFK-D16-X02-Y76		44
KFS-51-15-"L"-15-GFK-D16-X02-Y95		44
KFS-51-15-"L"-15-PTFE-D16-X02-Y55		44
KFS-51-15-"L"-15-PTFE-D16-X02-Y75		44
KFS-51-15-"L"-15-PTFE-D16-X02-Y76		44
KFS-51-15-"L"-15-PTFE-D16-X02-Y95		44
KFS-51-15-100-15-PEEK-D10-X02-Y55	KF 0304	56
KFS-51-15-150-15-GFK-D16-X0E-L-P-A-Z0E	KFK 009	73
KFS-51-15-200-15-GFK-D10-X02-Y75	KF 0285	55
KFS-51-15-300-15-GFK-D16-X0E-L-P-A-Z0E	KFK 025	74
KFS-51-15-60-15-PEEK-D10-M12-X0E-Y55	KF 0284	54
KFS-51-15-60-15-PEEK-D10-X01-Y55	KF 0331	53
KFS-51-15-60-15-PEEK-D10-X02-Y75	KF 0277	53
KFS-51-5-54-15-GFK/AL-D16-W-X02-Y55	KF 0314	57
KFS-5-2-"L"-15/X2-PTFE/VA-1"-StEx		86
KFS-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-X00-Y70		49
KFS-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-X00-Y70		49
KFS-52-15-"L"-15/X2-GFK-D16-X02-Y55		45
KFS-52-15-"L"-15/X2-GFK-D16-X02-Y75		45
KFS-52-15-"L"-15/X2-GFK-D16-X02-Y76		45
KFS-52-15-"L"-15/X2-GFK-D16-X02-Y95		45
KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y55		45
KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y75		45
KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y76		45
KFS-52-15-"L"-15/X2-PTFE-D16-X02-Y95		45
KFS-52-15-150-40/65-PTFE-D16-X0E-L-P-S-Z0E	KFK 031	75
KFS-53-15-"L"-15/X2/X3-GFK/VAc-D16-PHG1-X00-Y70		50
KFS-53-15-"L"-15/X2/X3-PTFE/VAc-D16-PHG1-X00-Y70		50
KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y55		46
KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y55		46

TYPE SELECTION IN DESCRIPTION ORDER

Type	Art.-No.	Page
KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y75		46
KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y76		46
KFS-53-15-"L"-15/X2/X3-GFK-D16-X02-Y95		46
KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y75		46
KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y76		46
KFS-53-15-"L"-15/X2/X3-PTFE-D16-X02-Y95		46
KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y55		47
KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y75		47
KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y76		47
KFS-54-15-"L"-15/X2/X3/X4-GFK-D16-X02-Y95		47
KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y55		47
KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y75		47
KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y76		47
KFS-54-15-"L"-15/X2/X3/X4-PTFE-D16-X02-Y95		47
KFX-5-1-"L"-15-N-A-PTFE/VA-1"-StEx		87
KFX-5-1-"L"-15-P-A-PTFE/VA-1"-StEx		87
KFX-51-15-"L"-15-GFK/VAc-D16-PHG1-N-A-KL		79
KFX-51-15-"L"-15-GFK/VAc-D16-PHG1-P-A-KL		79
KFX-51-15-"L"-15-PTFE/VAc-D16-PHG1-N-A-KL		79
KFX-51-15-"L"-15-PTFE/VAc-D16-PHG1-P-A-KL		79
KFX-5-2-"L"-15/X2-N-Ö-PTFE/VA-1"-StEx		88
KFX-5-2-"L"-15/X2-N-S-PTFE/VA-1"-StEx		89
KFX-5-2-"L"-15/X2-P-Ö-PTFE/VA-1"-StEx		88
KFX-5-2-"L"-15/X2-P-S-PTFE/VA-1"-StEx		89
KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-A-KL		82
KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-Ö-KL		81
KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-N-S-KL		80
KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-A-KL		82
KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-Ö-KL		81
KFX-52-15-"L"-15/X2-GFK/VAc-D16-PHG1-P-S-KL		80
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-A-KL		82
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-Ö-KL		81
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-N-S-KL		80
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-A-KL		82
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-Ö-KL		81
KFX-52-15-"L"-15/X2-PTFE/VAc-D16-PHG1-P-S-KL		80
Y75 / Y55 KFS-5-1-... 2m	66101213	103
Y75 / Y55 KFS-5-2-... 2m	66101242	103
Y75 / Y75 KFS-1-... 2m	66101201	103
Y75 / Y75 KFS-1-... 5m	66101202	103
Y75 / Y75 KFS-5-2(4)-...	66101203	103
Y75 / Y75 KFS-5-2(4)-... 2m	66101204	103
Y75 / Y75KFS-5-4-... 2m	66101205	103

RECHNER

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Казахстан +7(727)345-47-04

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Беларусь +(375)257-127-884

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Узбекистан +998(71)205-18-59

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Киргизия +996(312)96-26-47

<https://rechner.nt-rt.ru> || ret@nt-rt.ru